



Nintendo Wii Remote Main Buttons Replacement

How to remove the main buttons from the Wii Remote.

Written By: Emily



INTRODUCTION

Removing the main buttons requires opening the device. The main buttons include all buttons except the trigger style B button.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Y1 Tri-point Screwdriver](#) (1)
-

Step 1 — Front Cover Plate and Batteries



- Flip the Wii Remote over so the battery cover faces you.
- Push up on the bottom tab.
- Remove the battery cover.

Step 2




- Remove the first battery by pressing down on the positive end and pulling the battery out.
- Remove the second battery by pushing up on the positive end and pulling the battery out.

Step 3





- Using a tri-point Y1 Screwdriver, remove the two center 7mm screws by turning them counterclockwise.
- Repeat with the two bottom screws.

Step 4

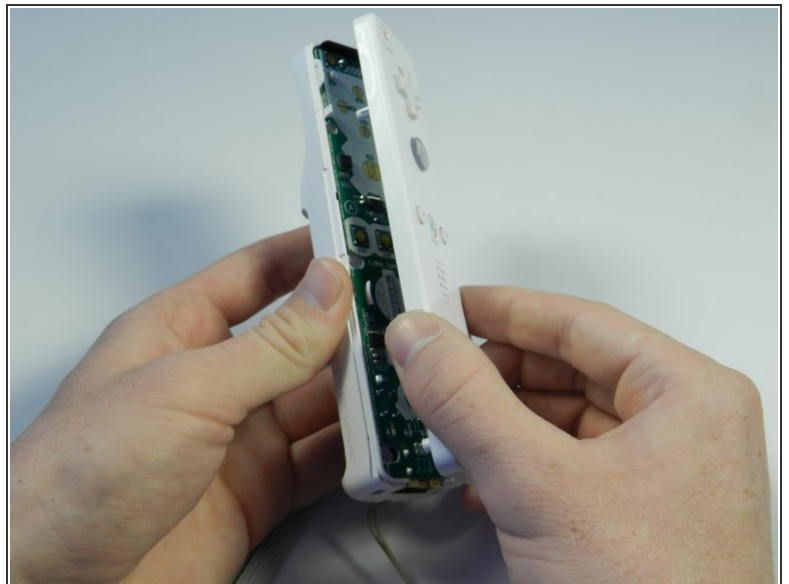


- With the flat end of a spudger, gently apply pressure to the tabs located on left side of the controller.
 - ⓘ These tabs are breakable. However, if the tabs are broken the controller will still function.
- Open the front plate like a book.
 - ⚠ Small parts may fall out as you open the front plate.

Step 5 — Main Buttons

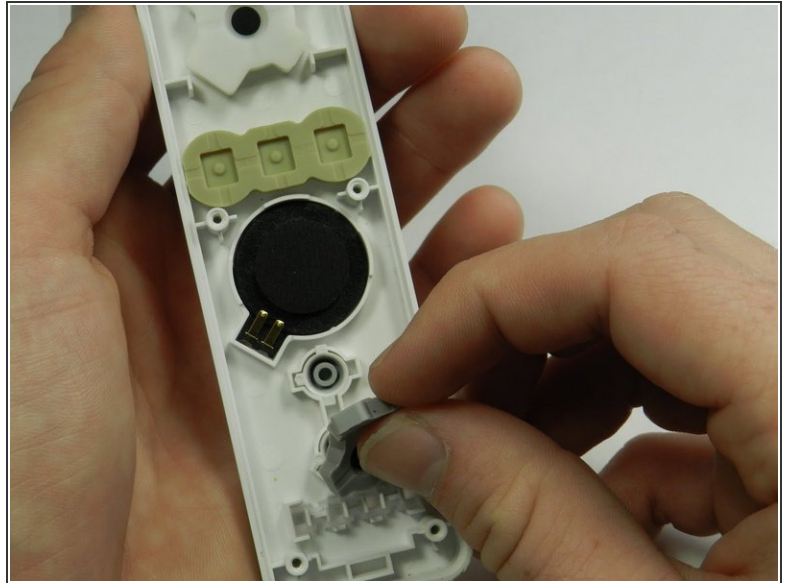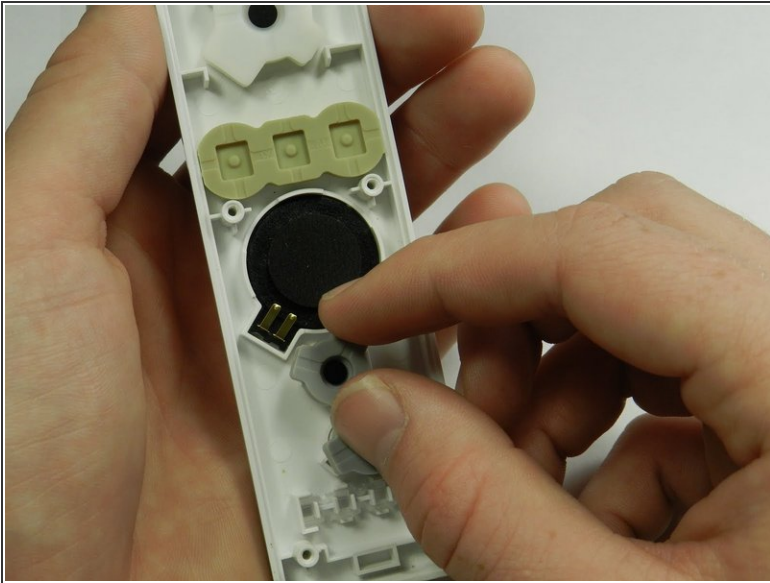

- Working on the inside of the front cover, peel off the three rubber pads covering the buttons.

Step 6

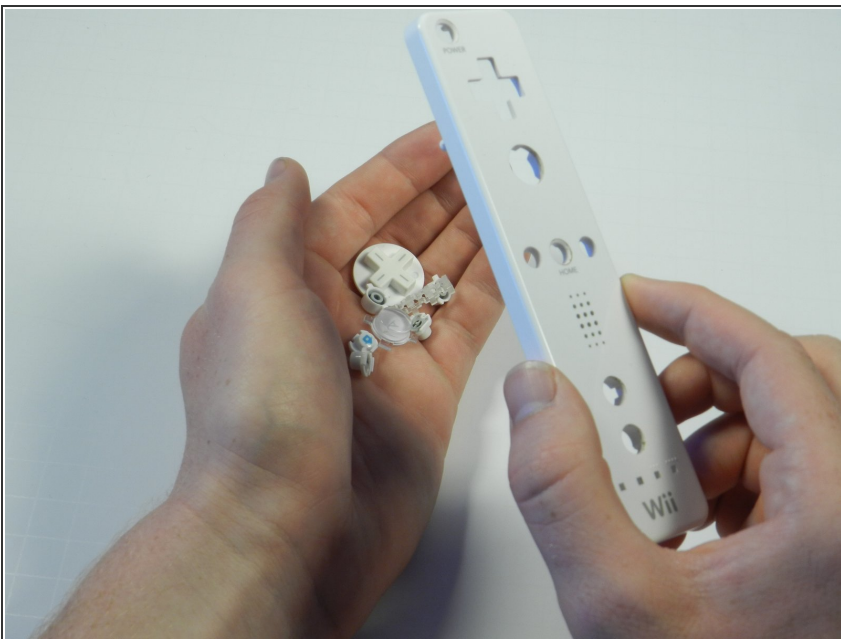

- Flip over the cover, allowing the buttons to fall into your hand.
- ⓘ Be ready to catch all the buttons, some are very small. If a button does not fall out apply gentle pressure from behind.
- ★ When reassembling, put each plastic button in its allocated slot. Each button only fits snugly in one slot.
- ⓘ The best option for you is rotate the Wii Controller by 180°. If you obey this note, the small parts won't fall off and then you can remove the buttons.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-15 12:25:58 PM.