 


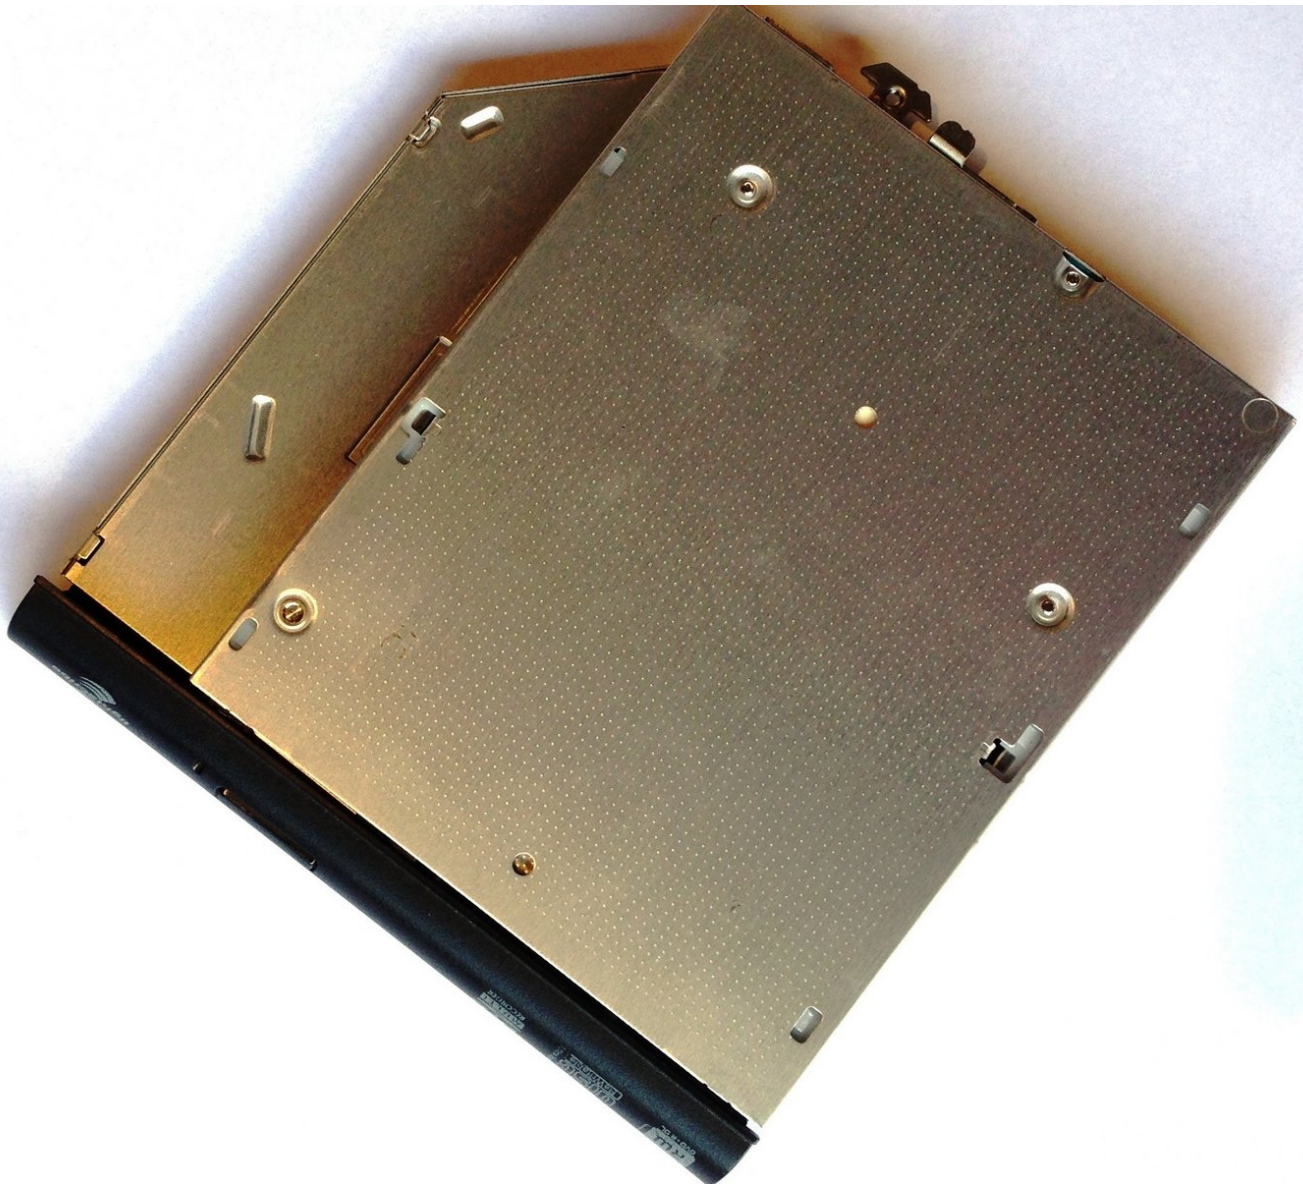

removing the HP Elitebook 6930p Optical Drive

This guide shows you how to remove the optical drive from the laptop

Written By: Richdave



 
INTRODUCTION

This guide shows you how to remove the optical drive from the laptop

TOOLS:


- [Phillips #1 Screwdriver](#) (1)
 - [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)
-

Step 1 — Battery Removal

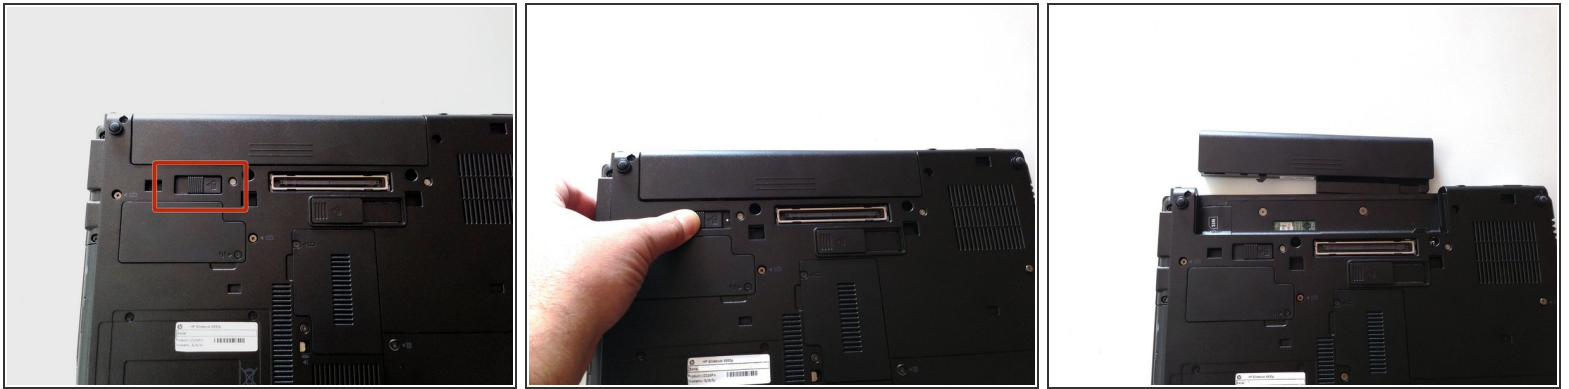

- Flip laptop over and locate the battery release button
- Push release button to the left to release battery and gently pull battery from the laptop

 Step 2 — Optical Drive

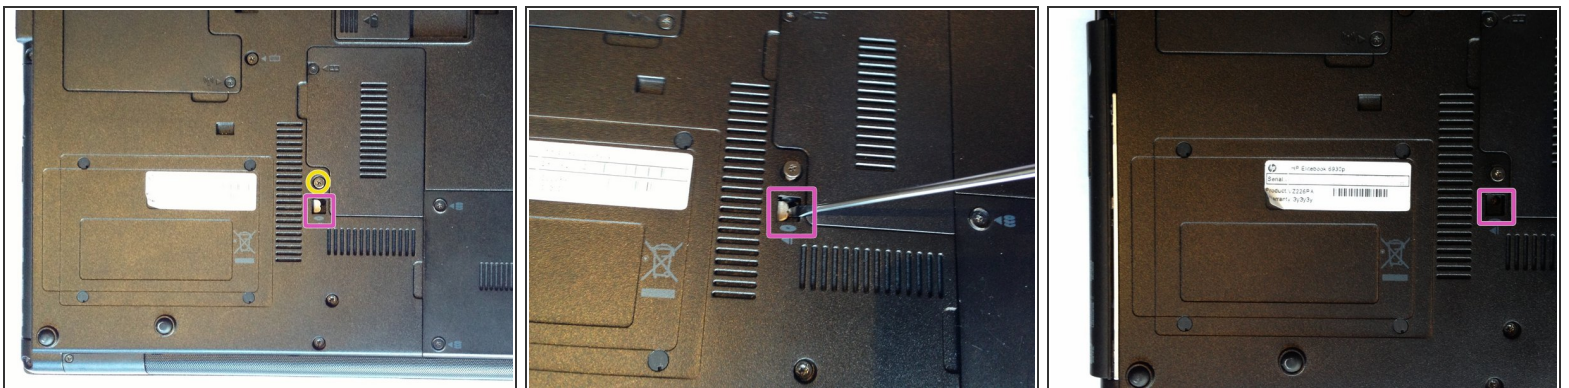

- With the bottom of the laptop facing up and the front toward you locate and loosen the M2.5×9.0 **captive** screw holding the optical drive into the laptop.
- Insert a flat-bladed screwdriver or similar tool into the optical drive tab access hole and press the tab to the left to release the optical drive from the computer
- The optical drive will unlock and pop out of the side of the laptop. You are now able to remove the optical drive from the laptop.

To reassemble your device, follow these instructions in reverse order.

