




Acer Nitro 5 AN515-53-52FA Battery Replacement

Use this guide to replace the battery in the...

Written By: Alfredo Prieto

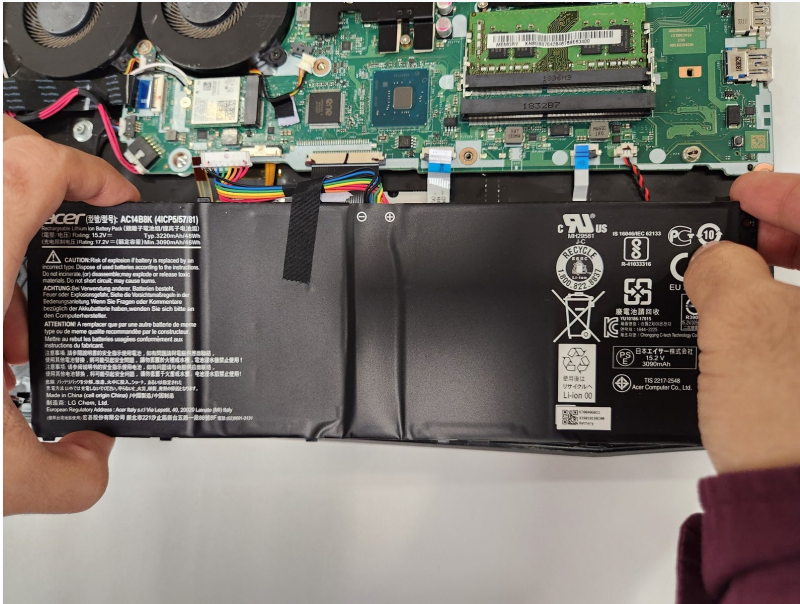

INTRODUCTION

Use this guide to replace the battery in the Acer Nitro 5 AN515-53-52FA laptop.

Before doing this guide please make sure there is no external power connected and that nothing is on. This 4-cell battery is the power supply, without it there would be no way to run the laptop. With this guide you will be able to replace the battery with a new one.

If your battery is dying at an alarming rate than normal, this is a great indication that you'll need to replace it. If there is any bulge on the battery, remove it immediately/safely and send it to a trusted disposable place.

TOOLS:


[Phillips #0 Screwdriver \(1\)](#)
[iFixit Opening Picks \(Set of 6\) \(1\)](#)

PARTS:


[Acer AC14B3K, AC14B8J, and AC14B8K Laptop Battery \(1\)](#)

Step 1 — Battery




-  Before starting the replacement, make sure the laptop is turned off and unplugged.
- Flip the laptop upside down so that the bottom is facing up.

Step 2

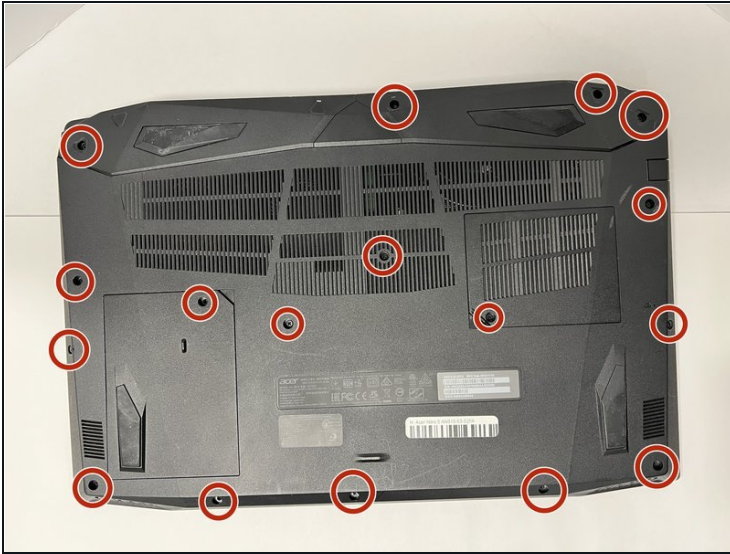

- Use the Phillips #0 screwdriver to unscrew the sixteen 9 mm screws holding the back cover in place.

Step 3

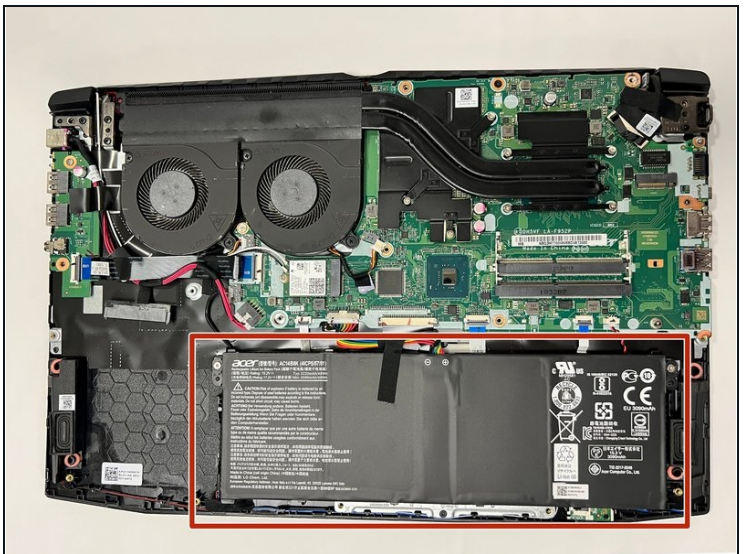


- Use the opening pick to work your way around the edges to remove the bottom case carefully.
- ① Do not try to put too much force on the shell off as you may damage it.

Step 4





- Use the Phillips #0 screwdriver to unscrew the four 9 mm screws holding the battery in place.

Step 5

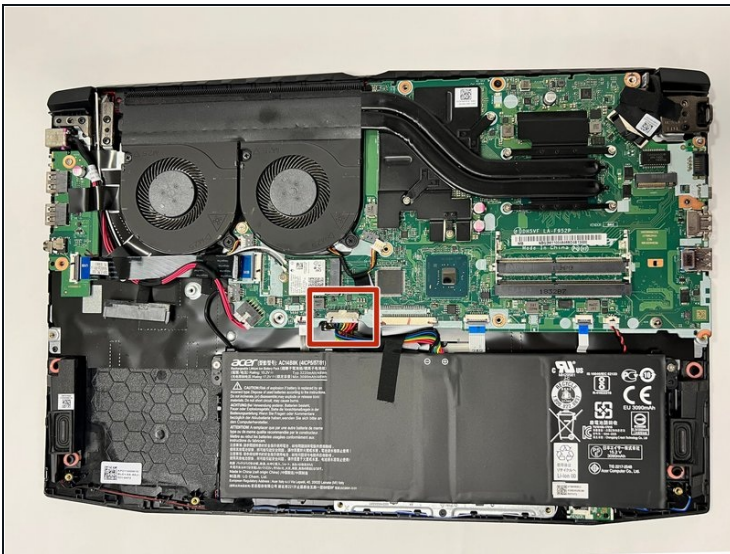

- Disconnect the battery's motherboard connector with your fingers.

Step 6

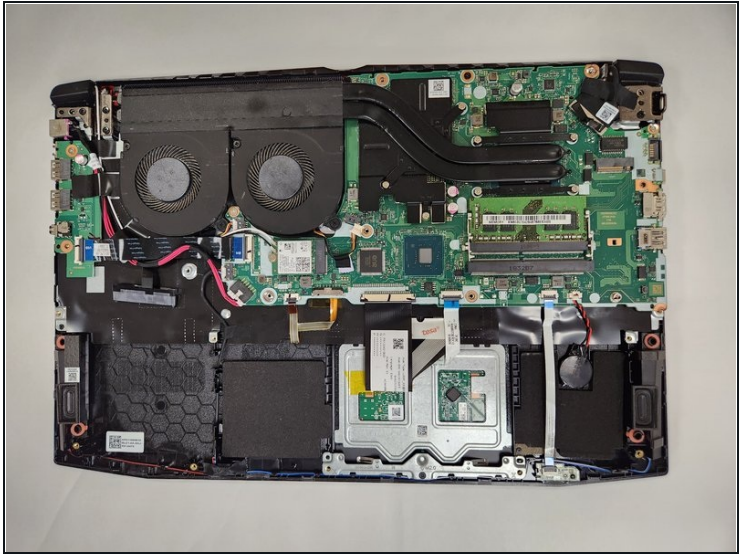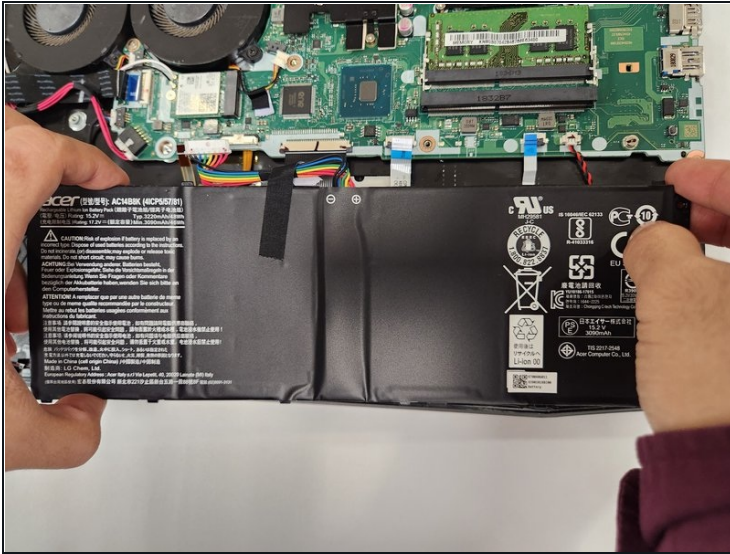

- Lift the battery up and out of the laptop.

To reassemble your device, follow these instructions in reverse order.