




ilo 1Gb Mp3 Player SD Card Replacement

This Guide shows how easy installing and replacing an SD Card is in the ilo 1Gb Mp3 Player.

Written By: tj курт01



Step 1 — Belt Clip

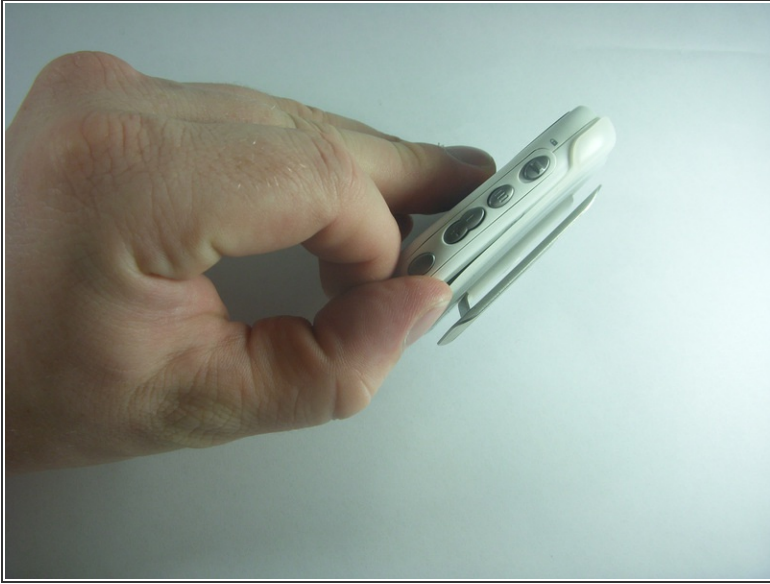

- Remove the belt clip by pulling the clip casing up and away from the device starting at the top over the slightly protruding headphones jack.

Step 2 — Battery Cover



- Remove the battery cover by gently pushing inward on the arrow on the cover.
- While maintaining pressure push the cover upward.

Step 3 — Battery



- Remove the Battery from the socket
- ⓘ When installing the battery take note of the signs displayed in the socket to determine which direction the negative and positive ends should be.

Step 4 — SD Card



- The SD Card slot is located under the battery case indicated here.
- The SD Card Slides into the slot as depicted in the photo and on the indicator above the slot.
- ☞ The ilo 1Gb Mp3 Player was only designed to accept SD Cards of 512mb or lower.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-16 04:00:12 PM.