



# Sega Dreamcast Top Cover Replacement

Written By: wkwong



---

## INTRODUCTION


A guide to remove the Top Cover of the Sega Dreamcast.

---

### TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

## Step 1 — Expansion Bay

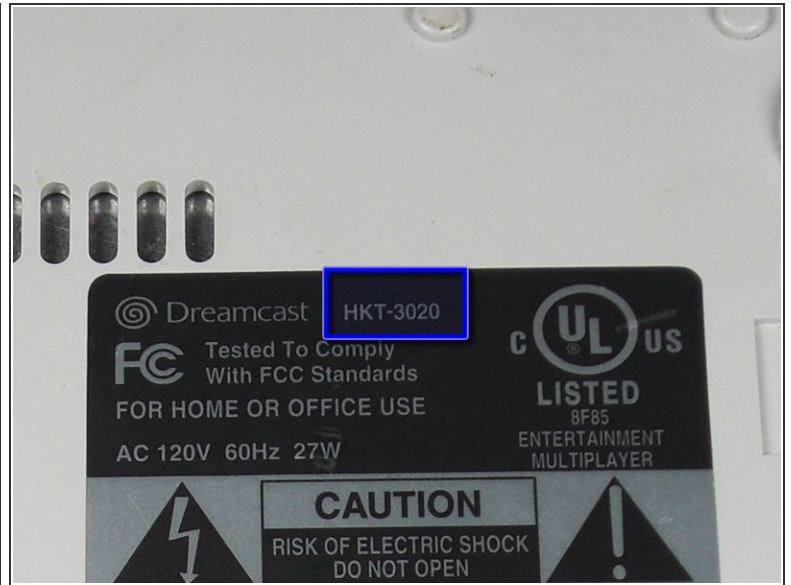

⚠ Verify that the console is disconnected from the AC outlet before you begin.

- Flip the console over on its back.
- Take note of your model number, in case replacement parts are needed.

## Step 2



- Remove the expansion bay by applying pressure to the small clip on the expansion bay while prying it away from the console.

### Step 3 — Top Cover



- **Locate and remove all four black 12mm Phillips #02 screws** from the underside of the console.
- ⓘ **Note:** Remove the expansion bay to locate the fourth screw

### Step 4



- ⚠ **Internal components can be loose.** Be careful that they do not fall out when removing the cover.
- Turn the console right side up.
- **Remove the top cover** by gently lifting the upper portion of the console.

To reassemble your device, follow these instructions in reverse order.