



Sega Dreamcast Expansion Bay Replacement

Written By: wkwong



INTRODUCTION

A guide to remove the expansion bay from the Sega Dreamcast.

Step 1 — Expansion Bay



 Verify that the console is disconnected from the AC outlet before you begin.

- Flip the console over on its back.
- Take note of your model number, in case replacement parts are needed.

Step 2



- Remove the expansion bay by applying pressure to the small clip on the expansion bay while prying it away from the console.

To reassemble your device, follow these instructions in reverse order.

