



Packard Bell 4X4 Desktop Top Cover Replacement

Removing the top cover on a 4x4 Packard Bell Desktop.

Written By: Brandon S



 **TOOLS:**

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Top Cover



- Remove the 3 Philips head screws from the back of the computer using your Philips screwdriver.

Step 2



- Using both hands on each side of the case, slide the top cover toward you. Lift it up off the computer.

Step 3



- The top cover is removed.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-12 03:51:52 AM.