



# Samsung Galaxy Note MicroSD Card Replacement

Remove or replace the microSD card in your Samsung Galaxy Note.

Written By: Sam Goldheart



---

## INTRODUCTION

Use this guide to replace your microSD card.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Rear Case



- Pry with a plastic opening tool, or your fingernail, in the divot to the right of the rear-facing camera, near the volume rocker.

## Step 2



- Lift and remove the rear case from the phone.

### Step 3 — Battery




- Insert your finger in the notch of the battery compartment.
- Press the battery toward the rear facing camera while pulling outward.

### Step 4 — MicroSD Card



- Use the flat end of a spudger, or your fingernail, to press the microSD card slightly deeper into its slot until you hear a click.
  - After the click, release the card and it will pop out of its slot.
- For reassembly, push the microSD card into the slot until it clicks in place.

## Step 5

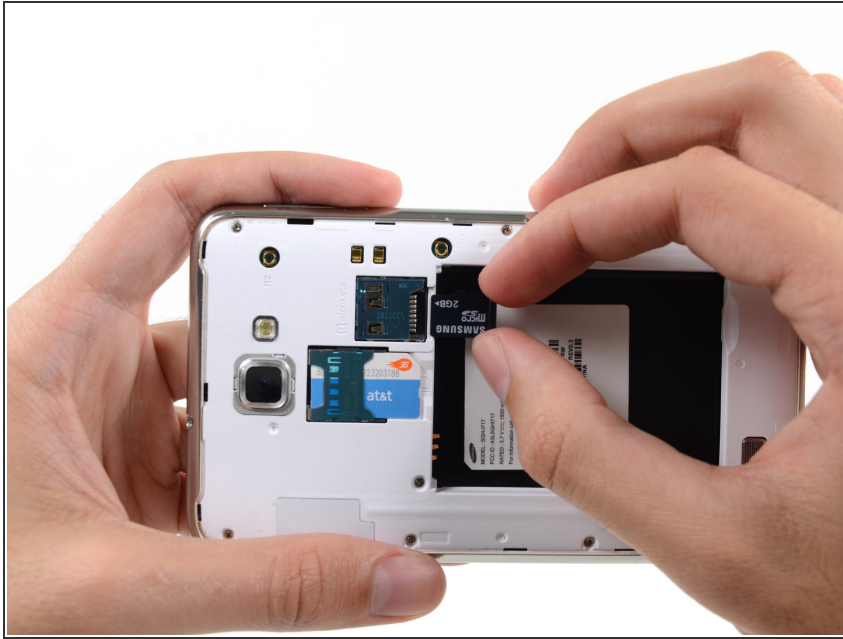

- Remove the microSD card from its slot in the midframe.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-08 08:47:31 PM.