



Samsung Galaxy S4 MicroSD Card Replacement

Replace the microSD card in a Samsung Galaxy S4.

Written By: Sam Goldheart



INTRODUCTION

Use this guide to replace a microSD card in your Samsung Galaxy S4.

TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Rear Case




- Pry with a plastic opening tool, or your fingernail, in the divot to the left of the rear-facing camera, near the power button.

Step 2



- Lift the rear case by the corner nearest the divot and remove it from the phone.

Step 3 — MicroSD Card

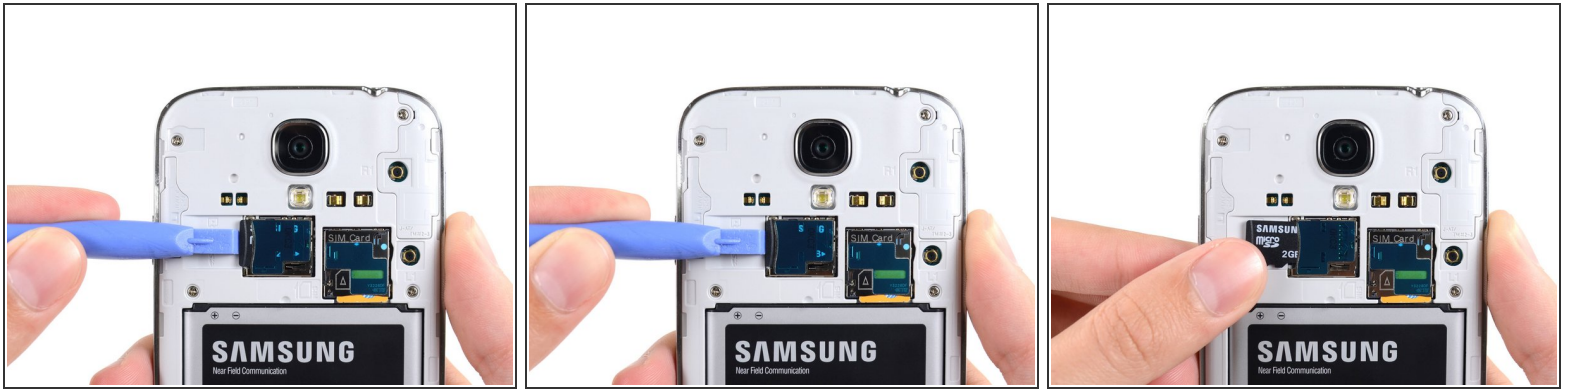

- Use the flat end of a spudger, or your fingernail, to press the microSD card slightly deeper into its slot until you hear a click.
 - After the click, release the card and it will pop out of its slot.
 - Remove the microSD card.
- For reassembly, push the microSD card into the slot until it clicks in place.

To reassemble your device, follow these instructions in reverse order.