



Pioneer Steel Wheels Foam Ear Pads Replacement

Removing the foam ear pads from the Pioneer Steel Wheels Headphone.


Written By: Garrett Leung



INTRODUCTION

This guide will show you the steps to remove the foam ear pads.

Step 1 — Foam Ear Pads

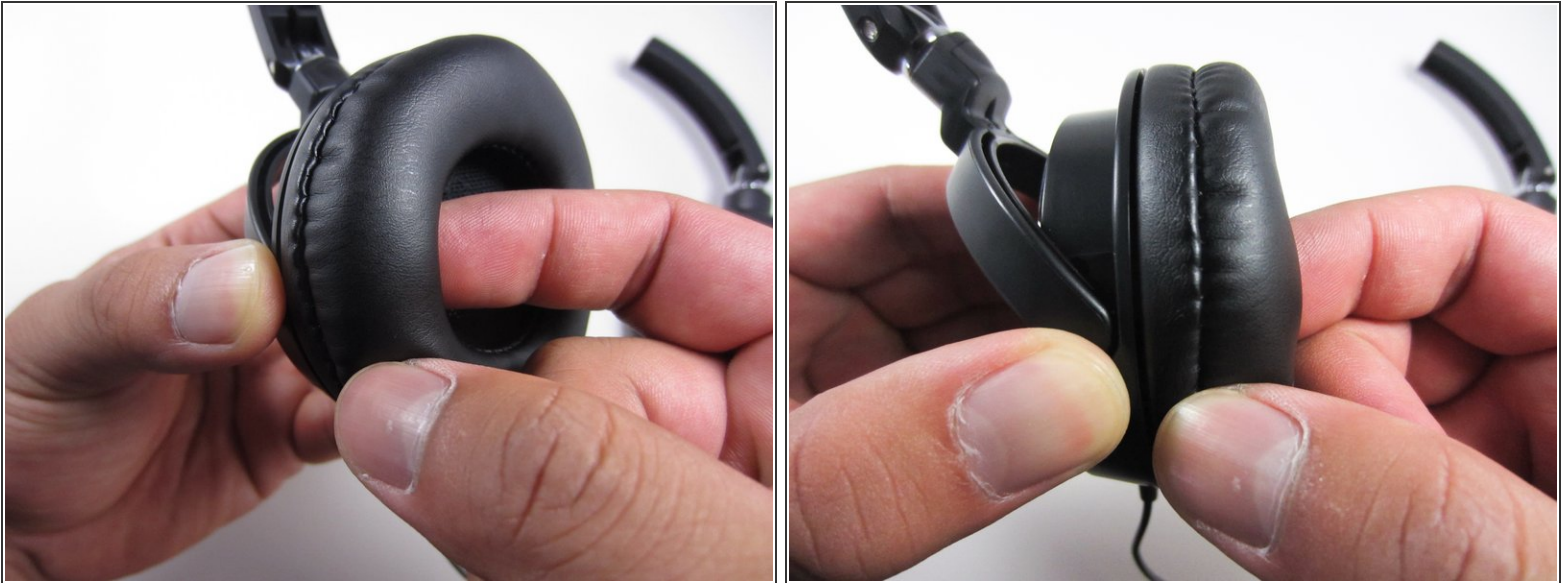

- While holding the base of the ear cup with one hand, insert your index finger from your other hand into the inside of the foam ear piece.

Step 2



- With slight force, peel the foam ear pieces away from the ear cup.
- ⓘ Make sure to pull out the foam ear pieces slowly. Pulling on them fast will tear the leather wrapping.
- Repeat for the opposite side if necessary.

To reassemble your device, follow these instructions in reverse order.