



# iBook G4 14" 933 MHz-1.33 GHz Battery Replacement

Written By: iRobot



## INTRODUCTION

Changing the battery is easy -- all you need is a coin.



### TOOLS:


- [Coin](#) (1)



### PARTS:

- [iBook G4 14" Battery](#) (1)

## Step 1 — Battery

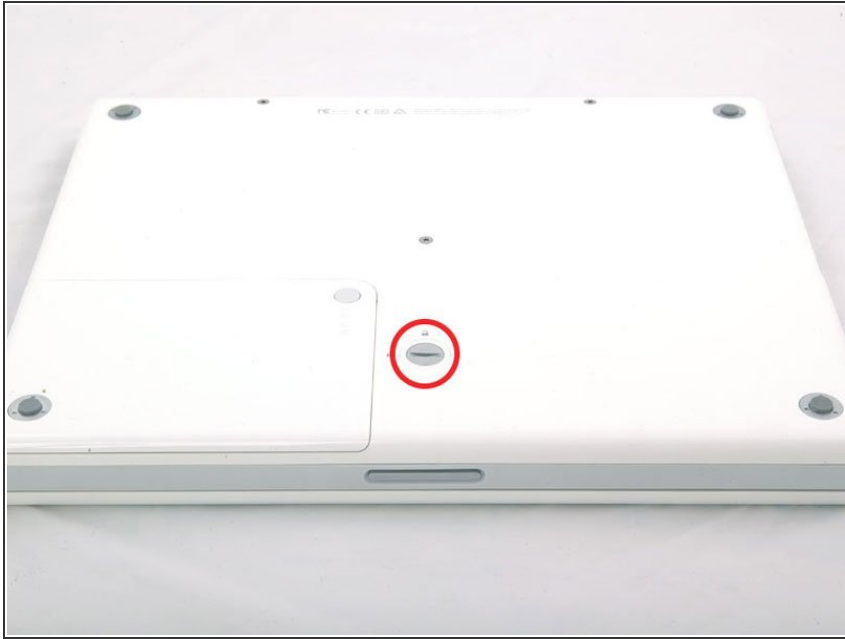

- Use a coin to rotate the battery locking screw 90 degrees clockwise.

## Step 2



- Lift the battery out of the computer.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-22 03:19:34 PM.