



# Samsung SCH-A950 Volume and Camera Buttons Replacement

Written By: Sean Kennedy



---

## INTRODUCTION

This guide will teach you how remove your Samsung's SCH-A950's Volume and Camera Buttons.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Tweezers](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- Slide the the battery release tab upwards while simultaneously lifting the back cover straight up.


## Step 2 — Volume and Camera Buttons



- Remove the four Phillips #00 screws underneath the battery.



### Step 3

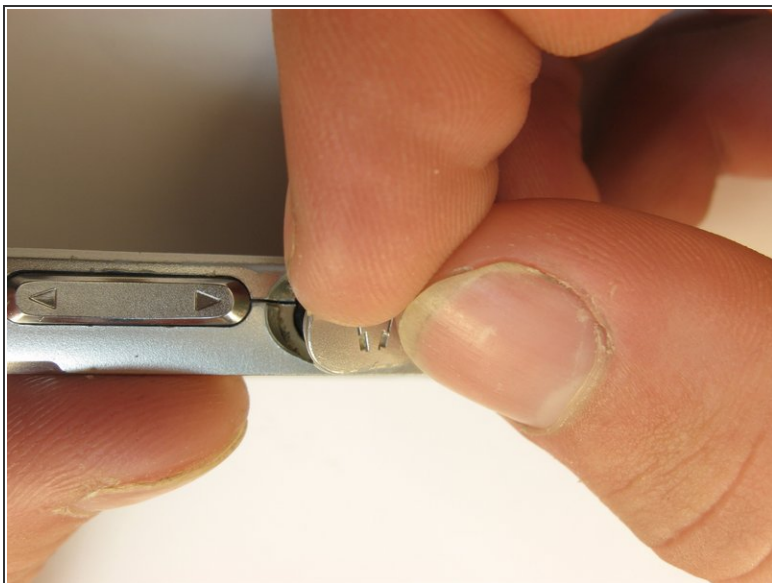




- Pull open the earphone tab and the Trans Flash tab using your fingers.

## Step 4




- Using a plastic opening tool, pry off the phone casing near the speakers as shown. Tabs located on the inside of the phone may make this difficult and some force may be required.
- Slide the casing slightly forward towards the top of the phone to remove.

## Step 5

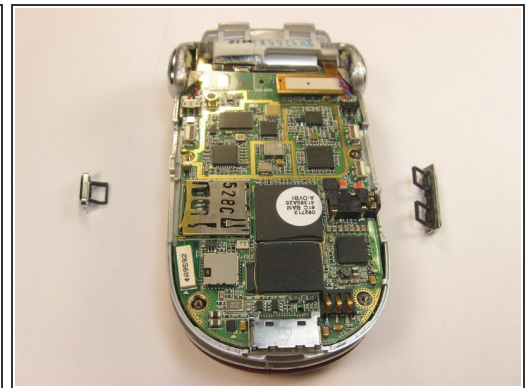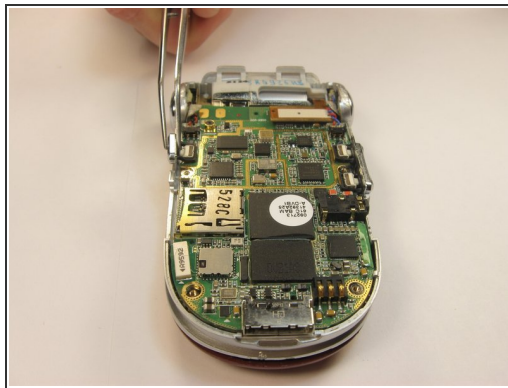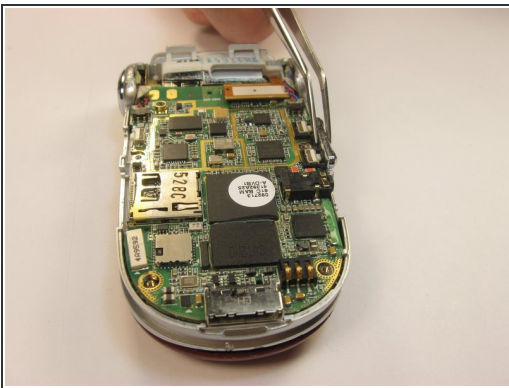

- Using tweezers or your fingers, lift off buttons from logic board.

 The buttons can be replaced if needed.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-17 11:50:03 AM.