



Canon PowerShot S500 Front and Rear Casing Replacement

Written By: Nathan Balcom



 **TOOLS:**

- Phillips #0 Screwdriver (1)
 - Spudger (1)
-

Step 1 — Front and Rear Casing




- Unscrew five Phillips screws using a #0 Phillips screwdriver.
- ❗ One screw is on upper right corner of the back panel.
- ❗ The other four screws are on the bottom of the camera.

Step 2





- Open the memory card cover by moving the slide switch toward the top end of of the camera.
- Remove the memory card from the slot.

Step 3

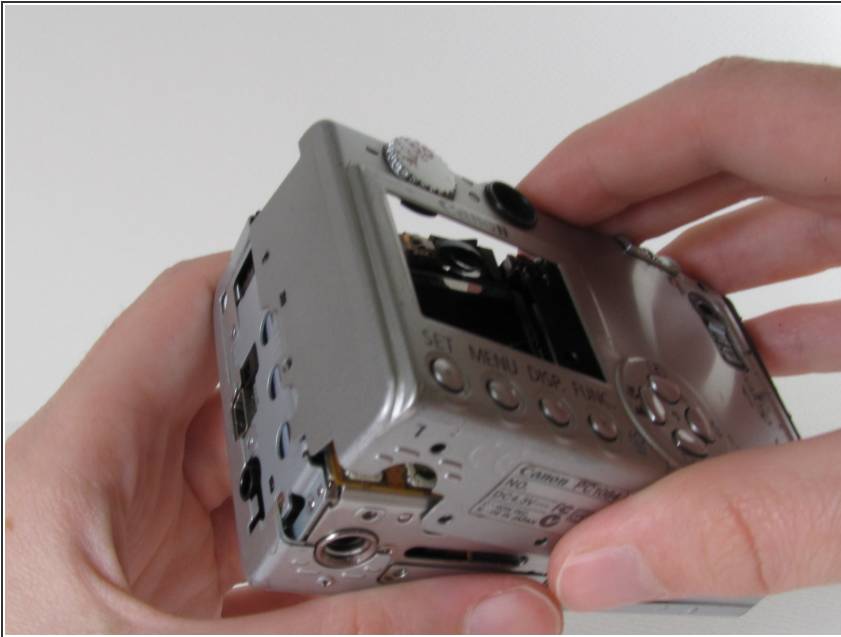

- Remove the rear cover from the rest of the camera.
- ⓘ This may require gentle rocking of the case to free it.

Step 4

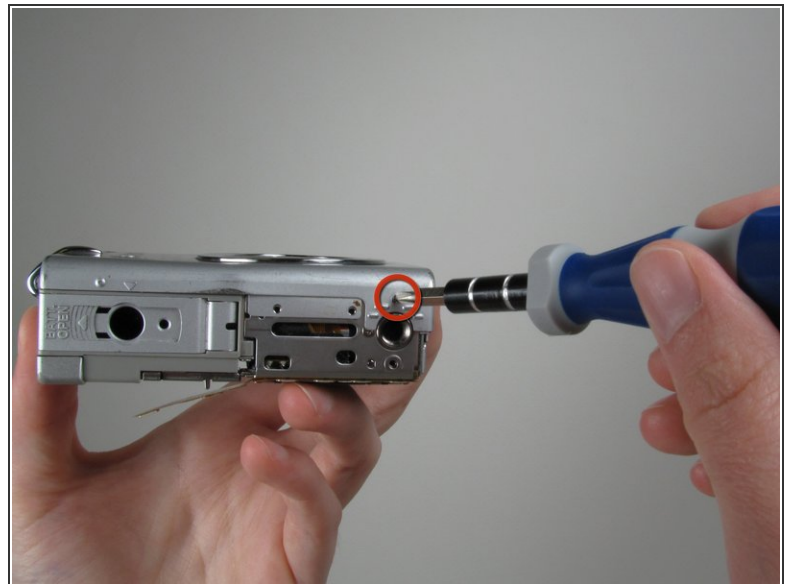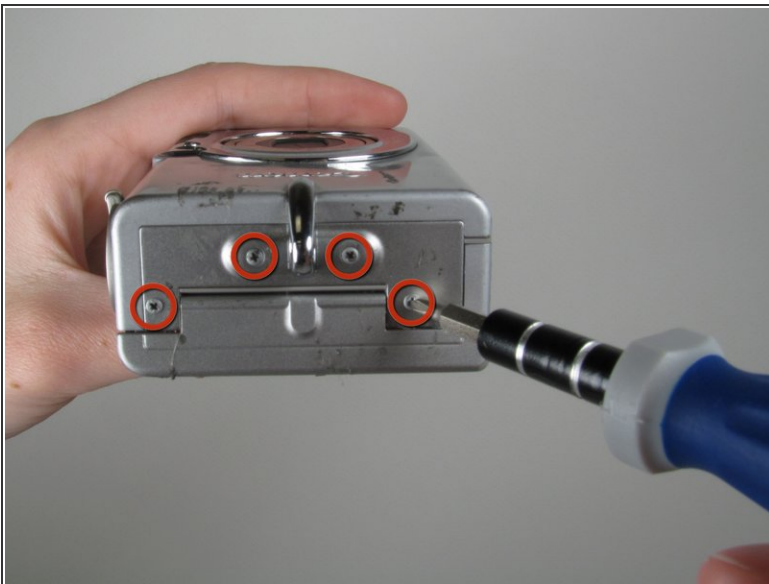

- Unscrew the four Phillips screws from the side of the casing and one screw from the bottom using a #0 Phillips screwdriver.

Step 5



- Free the front cover from the rest of the camera.
- ⓘ The cover may require gentle rocking to remove.

This document was last generated on 2019-07-22 08:56:24 AM.