




Game Boy Micro Faceplate Replacement

Written By: Jack

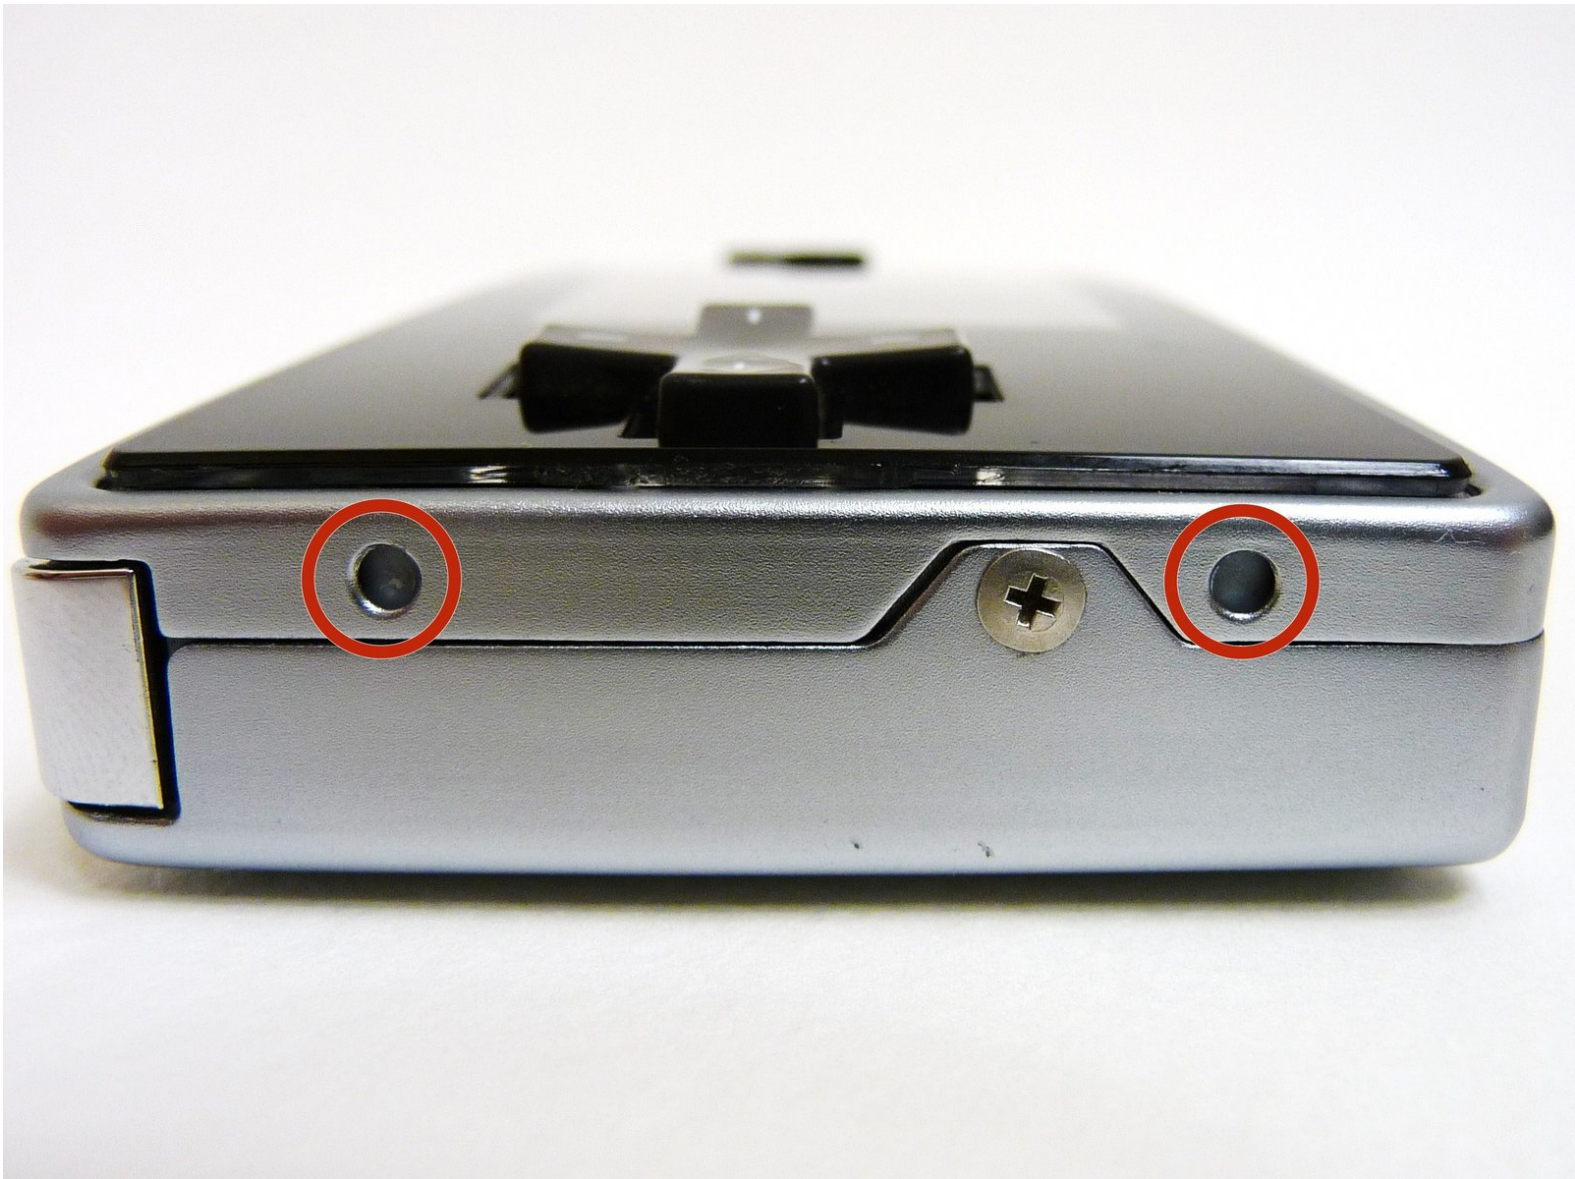

INTRODUCTION

Use this guide to remove and change faceplates.

TOOLS:

- [Paper Clip](#) (1)
-

Step 1 — Faceplate



- Locate the two circular holes on the side of the Game Boy nearest to the directional pad.

Step 2



- Straighten the end of a paper clip and push it into each of the circular holes.
- ⓘ You may hear a faint click afterwards.
- Use the paper clip to lever the faceplate off from the unit.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-09 08:35:57 PM.