




Canon Powershot A70 Rear Exterior Panel Replacement

How to replace the rear panel of a Canon Powershot A70 camera.

Written By: Shalan Ertis

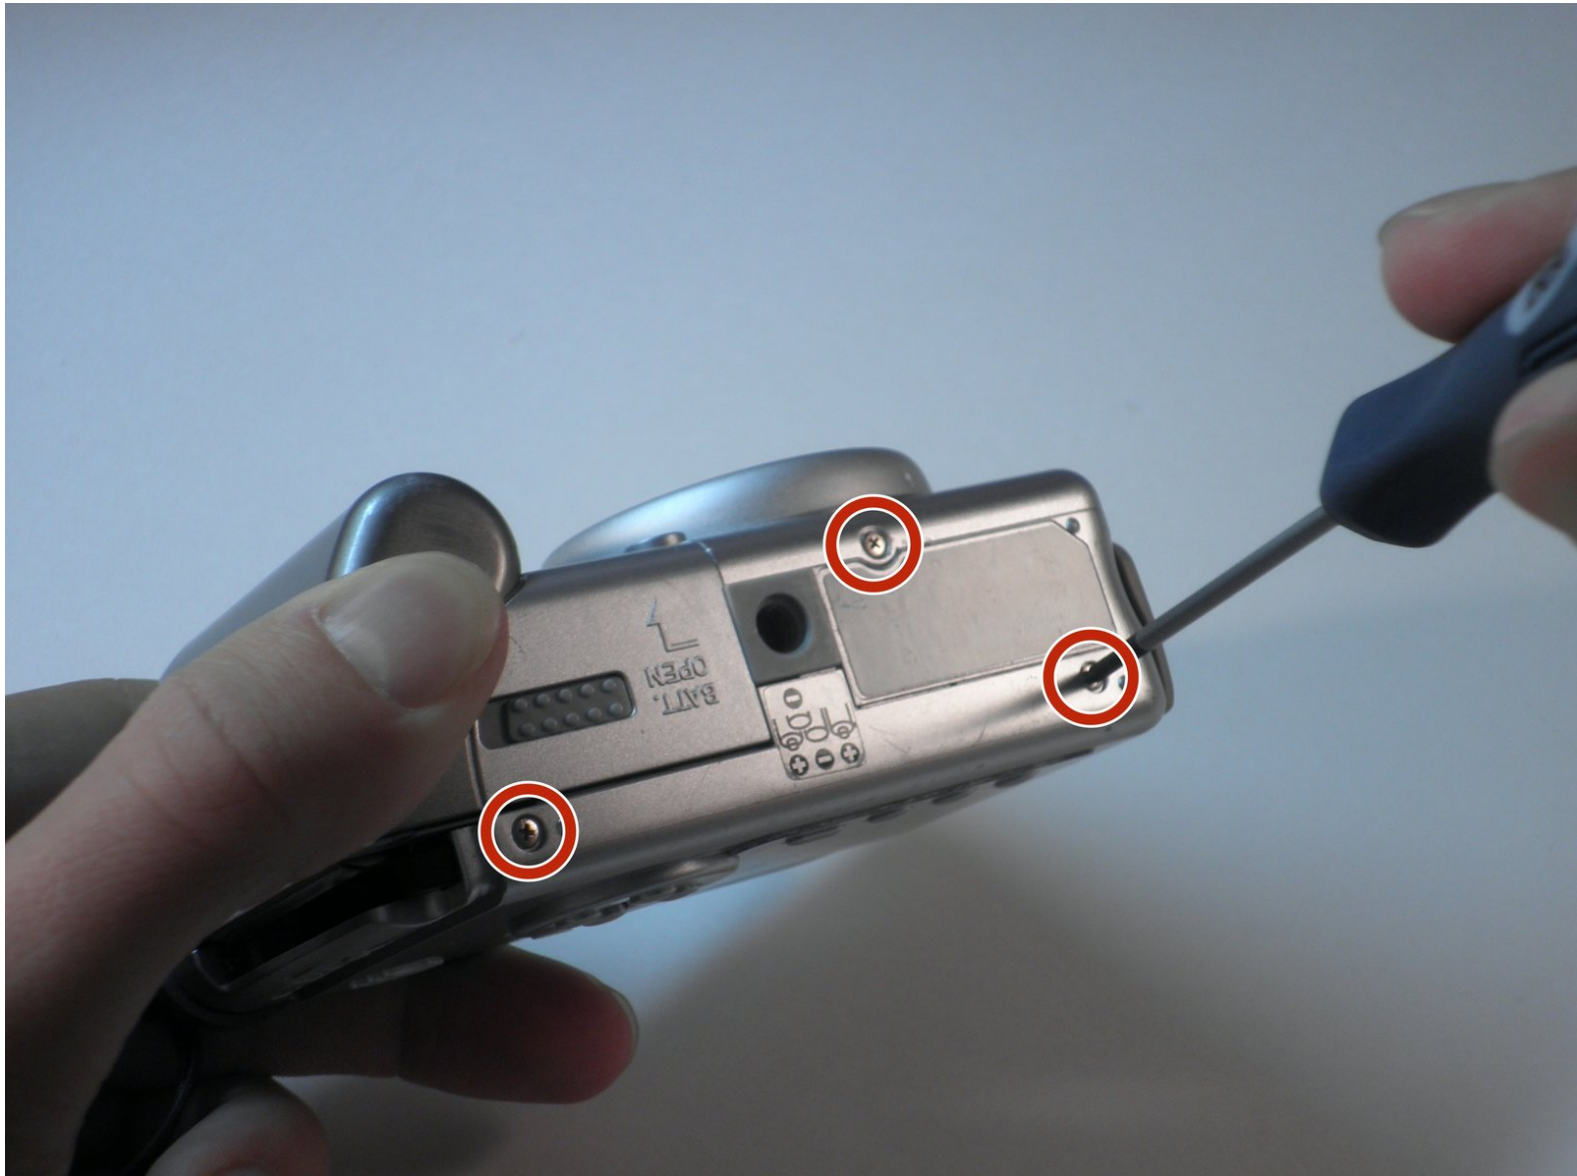

INTRODUCTION

This guide explains the location of exterior screws and the process to remove the rear panel of the Canon Powershot A70 camera.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Rear Exterior Panel



- Unscrew the three small screws on the bottom of the camera with a Phillips #00 screwdriver.
- Remove the wrist strap.

Step 2




- Remove the screw in the CF compartment with a Phillips #00 screwdriver.

Step 3




- Open the rubber Digital AV Out compartment flap.
- Pry the battery with an opening tool.
- Carefully pull out the battery with two fingers.
- Remove the two screws that are now visible with a Phillips #00 screwdriver.

Step 4

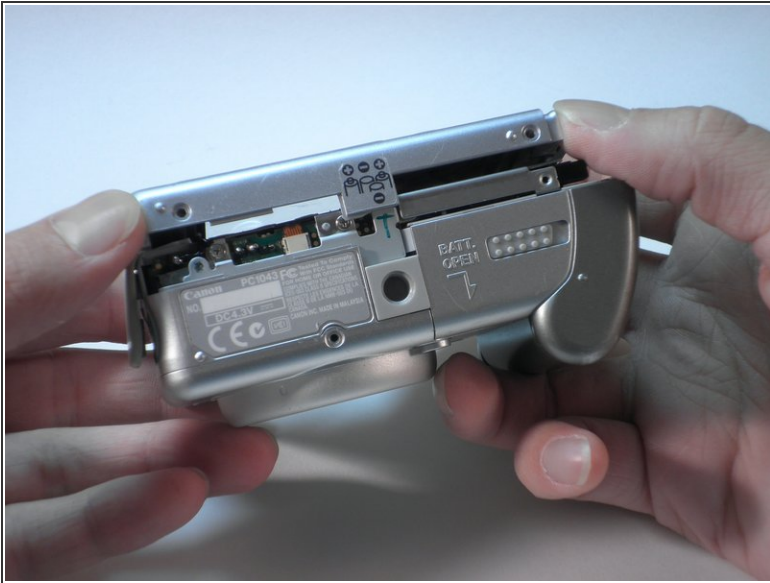

- Starting from the bottom, carefully pull the casing off.
- The casing will now pivot at the top.
 - There are three catches that hold the back casing to the body.
- ⓘ You may have to pull with some force. The rear panel will make a snapping noise when it separates from the body.

Step 5

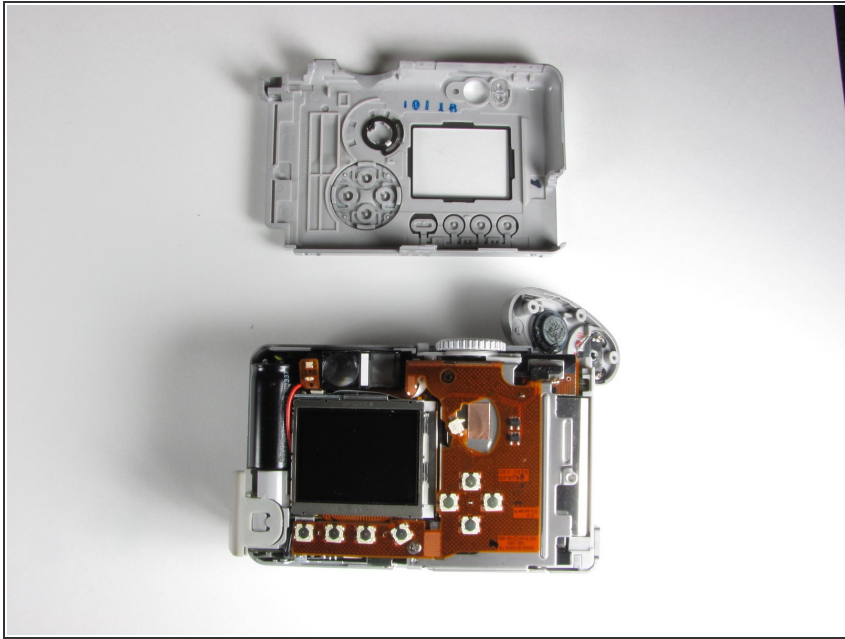

- The interior of the camera should look like this.

To reassemble your device, follow these instructions in reverse order.