


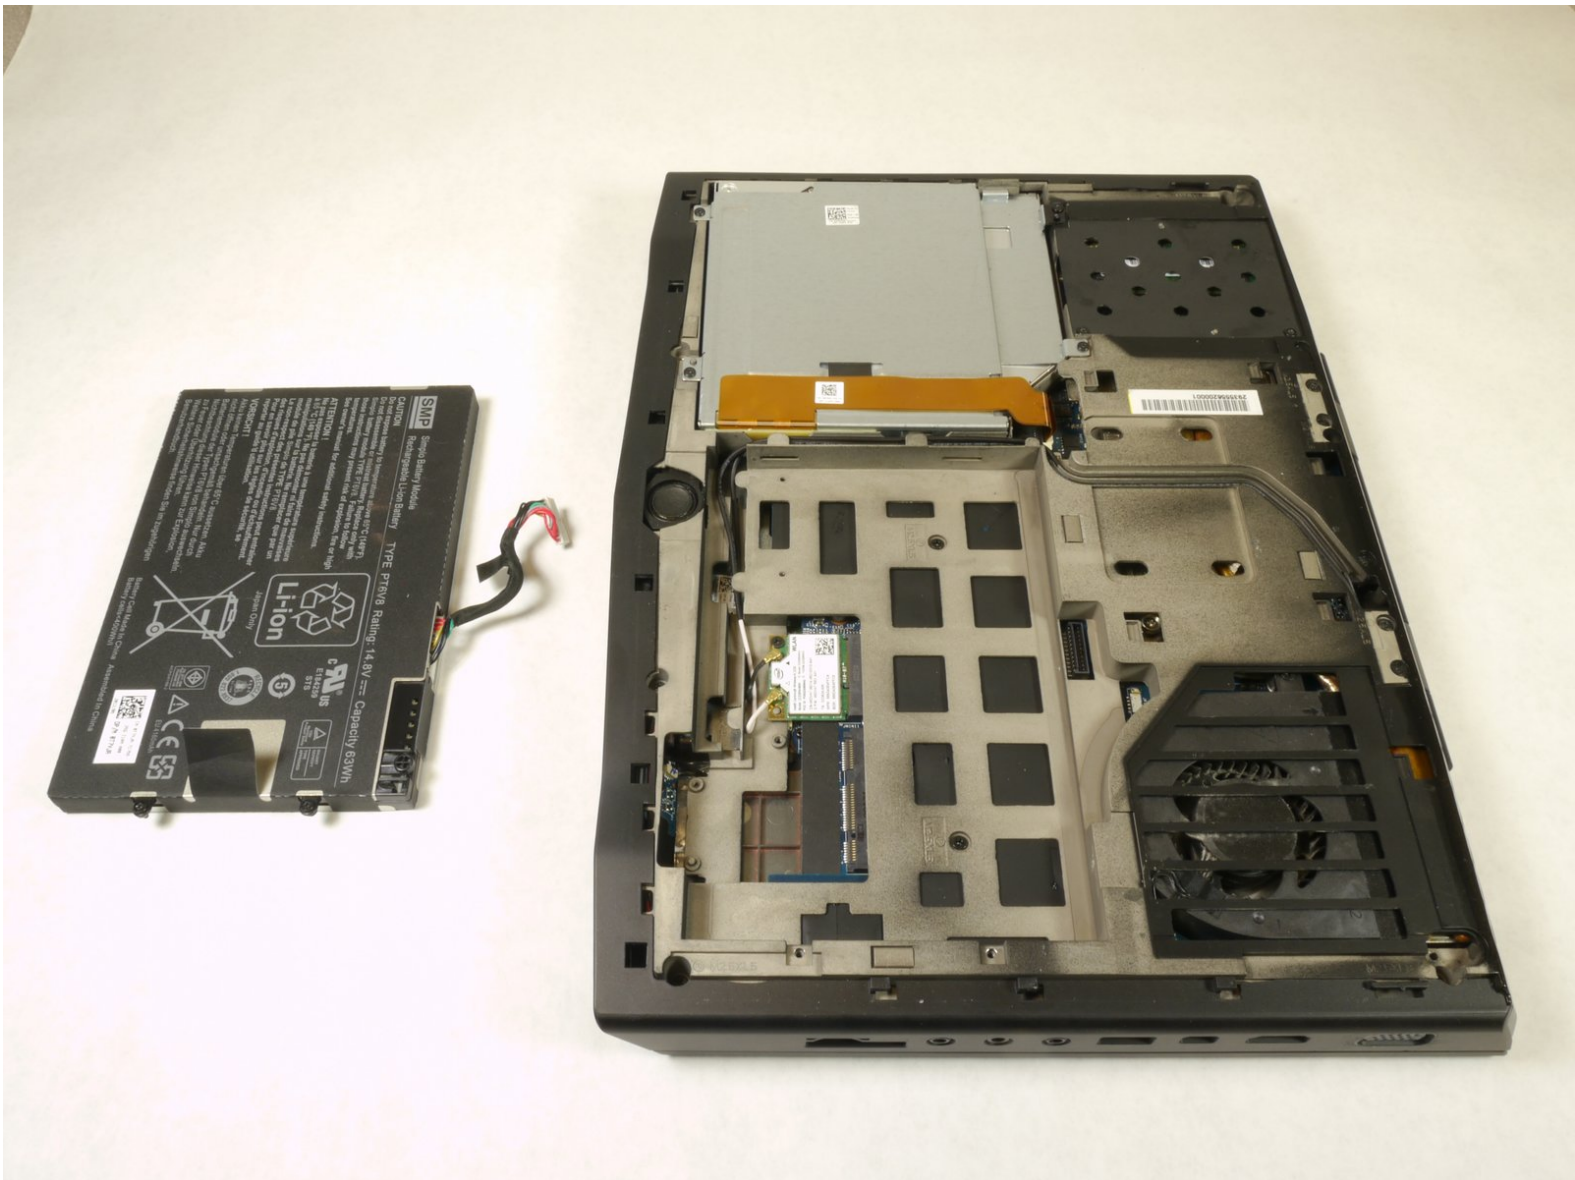

Alienware M14xR2 Battery Replacement

This guide will show you how to replace the battery in your Alienware M14x R2 laptop.

Written By: Connor Bovee



INTRODUCTION

This guide will show you how to safely remove your laptop battery without damaging the laptop or battery.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)

PARTS:


- [Alienware M14x-R2 \(P18G\) Battery](#) (1)
-

Step 1 — Battery



- Turn the computer off.
- Disconnect the charging cable from the computer.
- ⚠ Failure to unplug the charging cable could result in electric shock and serious injury.
- Flip the computer upside down.

Step 2

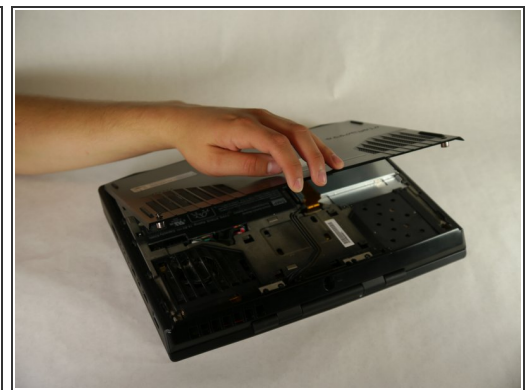


- Loosen the two 6.35 mm size 1 Phillips screws on the back cover.
 - ⓘ The two screws are spring loaded and will not separate from the cover.
- Slide the back cover towards you and then lift upwards to remove.

Step 3



- Loosen the two 6.35 mm size 1 Philips screws attaching the battery to the laptop.
- ⓘ The two screws are clipped into the battery and will not detach.

Step 4

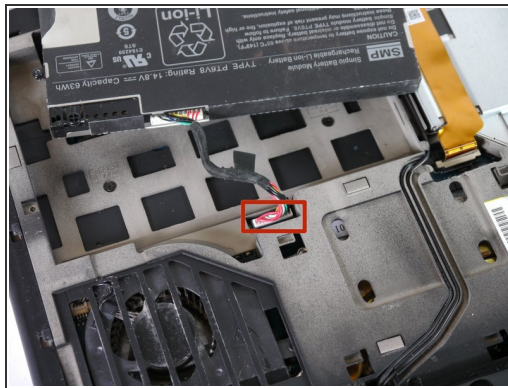

- Pull up on the black tab on the battery to reveal the connection between the battery and laptop.
- Pull up on the white connector to disconnect it from the laptop.
- The battery is now free to remove from the laptop and can be set aside.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-13 10:27:23 PM.