



Acer Chromebook C710 Battery Replacement

This guide will show you how to remove the battery.

Written By: Adam Whitmarsh



INTRODUCTION

The battery powers the laptop. Before taking anything out of the laptop, always remove the battery to avoid shocking yourself and damaging other components. Over time, the battery will lose the ability to charge. Replace the battery with a new one to regain your original battery life.



TOOLS:

- [Spudger](#) (1)



PARTS:

- [5200mah 6 Cell C710 Battery](#) (1)

Step 1 — Battery



- Place the laptop on a flat surface with the bottom side facing up.
- Place the tip of a spudger or finger into the hole on the battery release slider.

Step 2



- Use the spudger to move the slider to the right and hold it there.
- With the slider held, use your other hand to pull the battery back away from the laptop.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-21 08:46:27 AM.