



LG EnV Touch VX11000 Battery Replacement

This guide demonstrates how to replace the battery in an LG EnV Touch.

Written By: Rachel Smith



INTRODUCTION

If your LG EnV Touch VX11000 will not turn on or charge, you may need to replace the battery. This guide will show you how to replace the LG EnV Touch VX11000's battery.

Step 1 — Battery



- Turn the phone off.
- Flip it over so the front screen is facing down.

Step 2



- Slide the release latch down and toward you while lifting up on the left side of the battery cover.

Step 3



- Lift the edge of the battery to remove it.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-19 08:02:37 AM.