



Acer Chromebook C710 Back Cover Replacement

This guide will show you how to remove the back cover of the Acer Chromebook C710.

Written By: Bradley Pavy



INTRODUCTION

Removing the back cover exposes all the internal components of the laptop. Removing the back cover will void your warranty, so use caution not to damage any of the components inside.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery



- Place the laptop on a flat surface with the bottom side facing up.
- Place the tip of a spudger or finger into the hole on the battery release slider.

Step 2



- Use the spudger to move the slider to the right and hold it there.
- With the slider held, use your other hand to pull the battery back away from the laptop.

Step 3 — Back Cover



⚠ This step will void your device warranty.

- Use the screwdriver to pierce the warranty sticker.
- Unscrew and remove the #0 6mm Phillips screw and set it aside.

Step 4



- Slide the back panel towards you. The best spots to place your fingers are on the bumpers.
- Lift on the front edge to remove the panel.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-19 10:01:49 AM.