



Disassembling HP Mini 110-1046NR Memory Card Cover

Prerequisite guide for replacing the memory card or removing the Keyboard Bezel

Written By: Jared Cooper



INTRODUCTION

Prerequisite only



TOOLS:


- [Spudger](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery



- Power-off the netbook fully before attempting to remove the battery.
- Flip your netbook upside down, and locate the sliding tabs near the battery.
- Slide both tabs inward so that the battery visibly moves away from the case of the computer.
- Release the tabs and pull the battery out.

Step 2 — Memory Card Cover

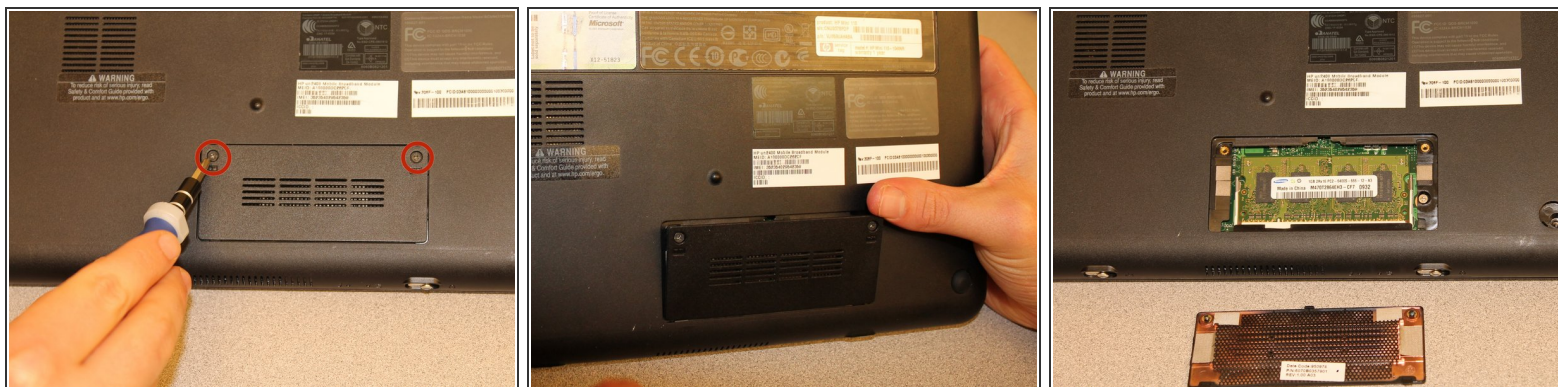

- Flip the netbook over so you are looking at the bottom, and locate the two screws that hold the memory card cover.
- Next, take a Phillips PH1 screwdriver and unscrew the two screws.
- ⓘ These screws will not release from the cover once they are unscrewed.
- If necessary, use the flat end of the spudger to assist in prying the cover away from the computer.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-19 08:38:41 PM.