



# Upgrading Memory

Written By: Clint Sorensen



---

## INTRODUCTION

The Brother HL-5240 printer comes standard with 16 megabytes of memory. The following steps can be followed to add more memory. Up to 528 MB of ram can be added.

---



### PARTS:

- [MB Buffalo Technology VN133-D128 / VN133-X128](#) (128)
  - [MB Buffalo Technology VN133-D256](#) (256)
  - [MB Buffalo Technology VN133-D512](#) (512)
  - [MB TechWorks 12165-0004](#) (64)
  - [MB Techworks 12462-0001](#) (128)
  - [MB TechWorks 12485-0001](#) (256)
  - [MB TechWorks 12475-0001](#) (512)
-

## Step 1 — Memory



- Flip the power switch to the off position by pressing the side of the button with an "O" symbol.
- Unplug the printer's cord from the wall socket.

## Step 2



- Locate the small removable panel on the left side of the printer.
- Press the tab at the top of the panel.
- Pull the panel open.

## Step 3



- Pull the old RAM out of its slot and insert the new RAM in its place.
- 

This document was last generated on 2017-07-25 04:51:15 AM.