



# LG VX5200 Face Plate Replacement

How to replace an LG VX5200 face plate.

Written By: Douglas Blaaid



---

## INTRODUCTION

A quick guide to removing the front cover of the flip phone.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
  - [Push Pin](#) (1)
-

## Step 1 — Battery




- Turn the phone on its back.

## Step 2



- Orient the phone as shown.
- Remove the battery cover by pushing upward with your thumb.

## Step 3

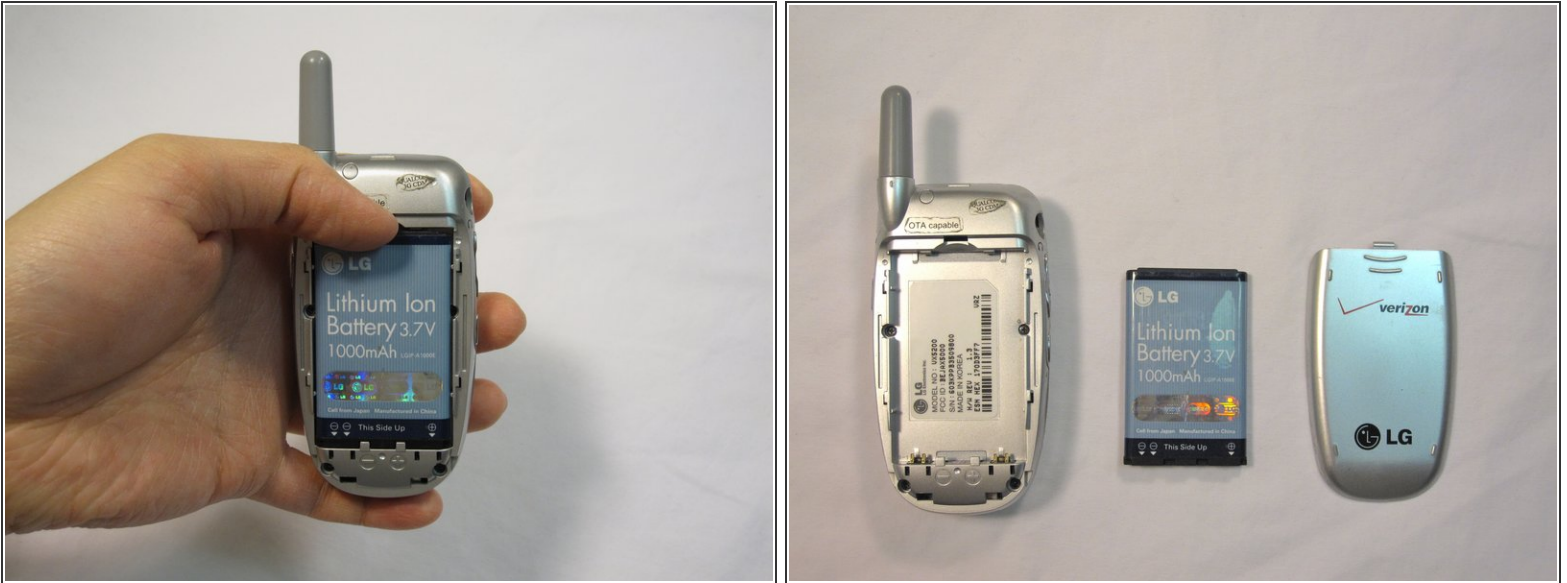


- Place your fingernail at the top of the battery and pry the battery out towards you.

## Step 4 — Face Plate




- Flip the phone open.
- Remove the four rubber plugs, located at the corners of the LCD screen, with a push-pin.
- Use a Phillips #00 screwdriver to remove the four screws located underneath the rubber plugs.

## Step 5

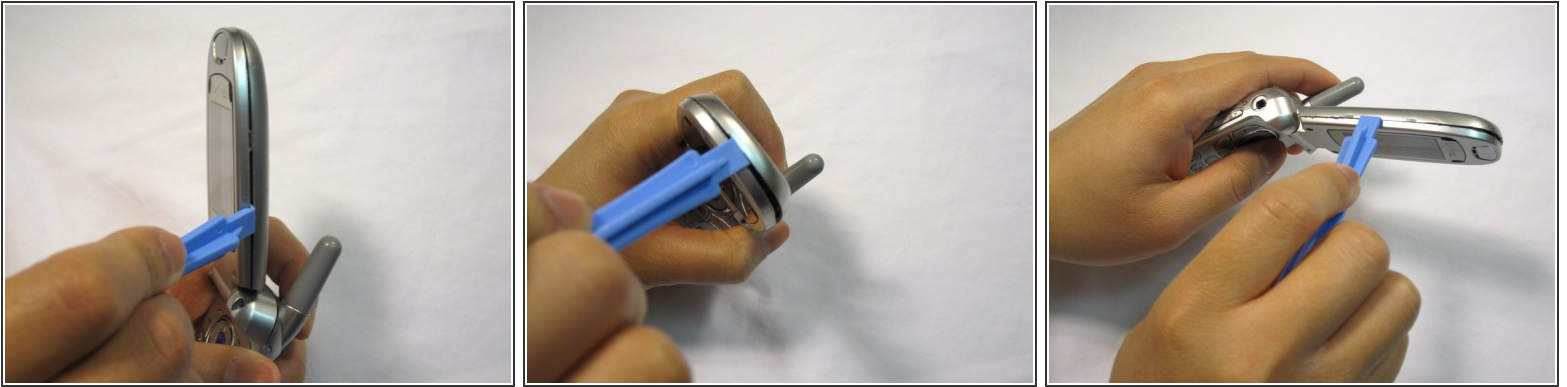

- Insert the plastic opening tool in the seam of the top portion of the flip phone.
- Gently pry the seam open.
- Move the opening tool around the perimeter of the seam and gently take the front LCD face plate out.

## Step 6

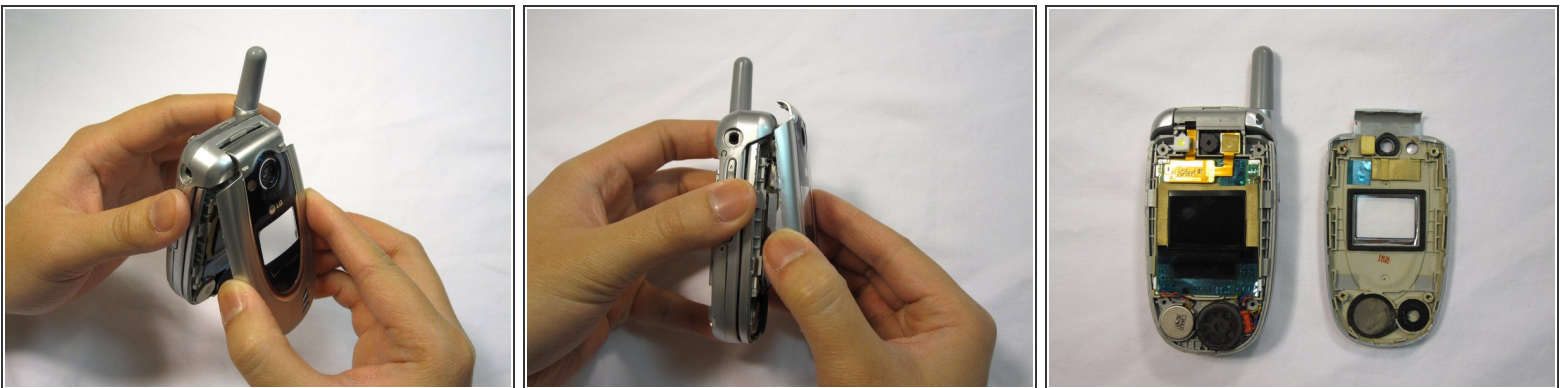

- Close the flip phone.
- Hold the base of the phone and gently remove the faceplate.
- Place the phone and the faceplate on a clean, flat surface.

To reassemble your device, follow these instructions in reverse order.