



TI-84 Plus Silver Edition Main Battery Replacement

This guide will serve as an overview of how to replace the main batteries in the TI-84 Plus Silver Edition.

Written By: Mary Prescott



INTRODUCTION

If your TI-84 Plus Silver Edition is not turning on, you may want to replace the main batteries. These are the main power sources for the device and if they have died, the power will not work.

Step 1 — Main Battery



- Push firmly down on the tab located on the back of the calculator near the center.
- Pull the tab up, lifting it off of the calculator and exposing the batteries.

Step 2



- Push from the positive side to the negative side and pull up to remove each battery.

To reassemble your device, follow these instructions in reverse order.