



General Electric Bagel Switch 4 Slice Lever Replacement

Replace the plastic lever of your General Electric Bagel Switch 4 Slice toaster.

Written By: Ron Gajdos



INTRODUCTION

This guide will explain how to replace the plastic lever of the General Electric Bagel Switch 4 Slice.

Step 1 — Lever



- Pull the plastic lever straight out from the toaster.

This document was last generated on 2017-06-17 06:50:51 PM.