



Insignia NS-B2110 Battery Replacement

You will learn how to effectively remove and replace batteries.

Written By: Daniel Hodges



INTRODUCTION

When the remaining batteries lose power, or die, you will need to replace them with new ones for your device to work. This guide will show you how to easily keep your device working.

TOOLS:


- [Spudger](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery



- Flip the stereo so the CD opening is face down.
- With two fingers, pinch the tabs and lift up to open the battery protection cover.

Step 2

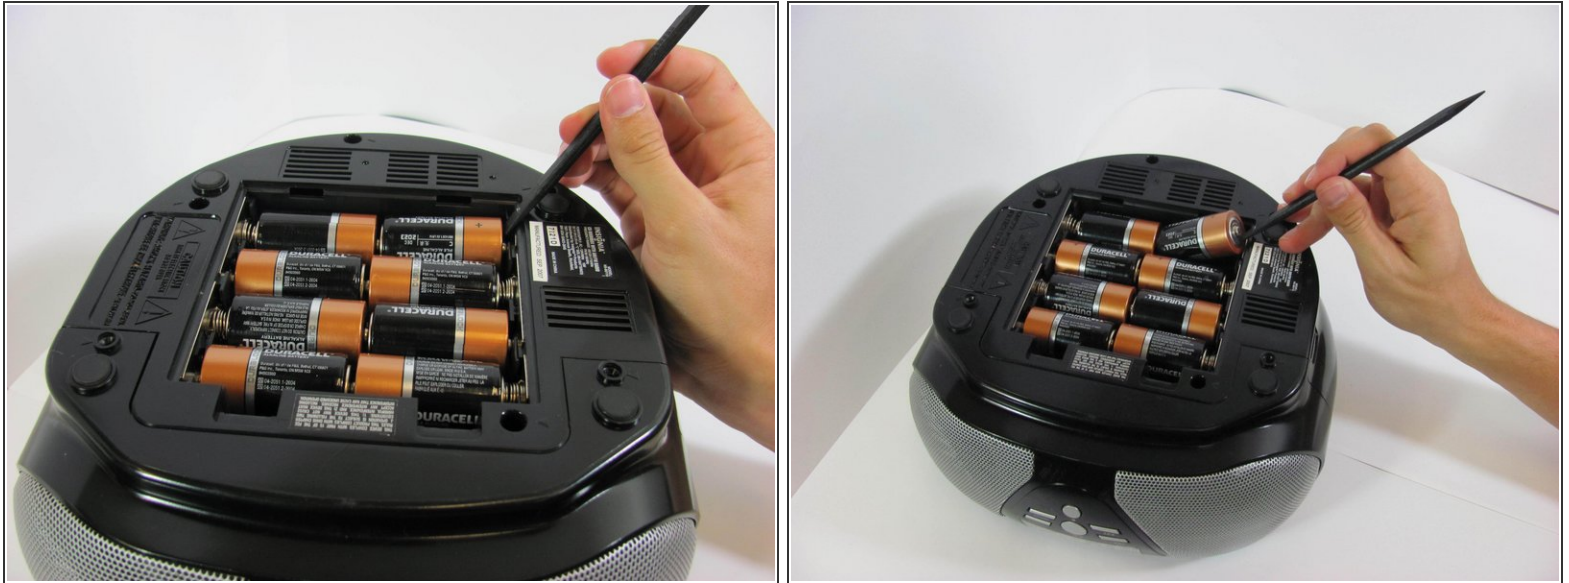

- Using a spudger or your fingers, push up against the positive end of the battery. Once it is loose, lift the battery out.
- Repeat until all eight batteries are removed.
- ☑ Make sure the batteries are facing the right direction. If the device does not turn on, you may have the batteries in the opposite orientation.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-17 05:50:16 PM.