



Crosley CR704 Control Knobs Replacement

Have you lost or broken your radio control knobs? Here's how to replace them.

Written By: MarkAnthony



INTRODUCTION

Control knobs are available in a wide variety of shapes, sizes, and materials and are used for various applications and come or can be designed in many configurations including instrument, pointer, skirted, large fluted with skirt, soft touch, and illuminated. Your replacement control knob should fit over a 6mm peg.



TOOLS:

- [Spudger](#) (1)



PARTS:

- [control knob](#) (1)
-


Step 1 — Safety



- Unplug the power cable if it is plugged in so that you don't electrocute yourself or loved ones.
- Make sure the turntable cover is closed so that nothing jostles out of place.

Step 2



- Using a spudger, gain a position of leverage and insert the end of the spudger into the gap between the radio knob and the device.
 - With some force, pry the knob off of its peg.
-  The knob should slide off smoothly, but beware of flying knobs!

Step 3



- Applying some force, insert the replacement knob onto the peg.

Test by turning on your radio and playing a tune. We suggest "Last Dance" by Dona Summer.

This document was last generated on 2017-07-09 01:58:48 PM.