

Repairing Polaroid Sun 600 LMS Gear Train

Written By: Matthew Lessig



Guide ID: 1965 - Draft: 2016-03-16

INTRODUCTION

How to manually advance a stuck gear train.



TOOLS:

• iFixit Opening Tools (1)

Step 1 — Open film door





- Move film door slide on the left side of camera forward.
- Pull film door open.

Step 2



 Locate small silver gear in top left corner of film bay.

Step 3



 Using a plastic opening tool, rotate gear downward until jam is cleared.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-10 11:56:50 AM.