




PowerMac G4 M5183 RAM


Written By: Justin Petrilli

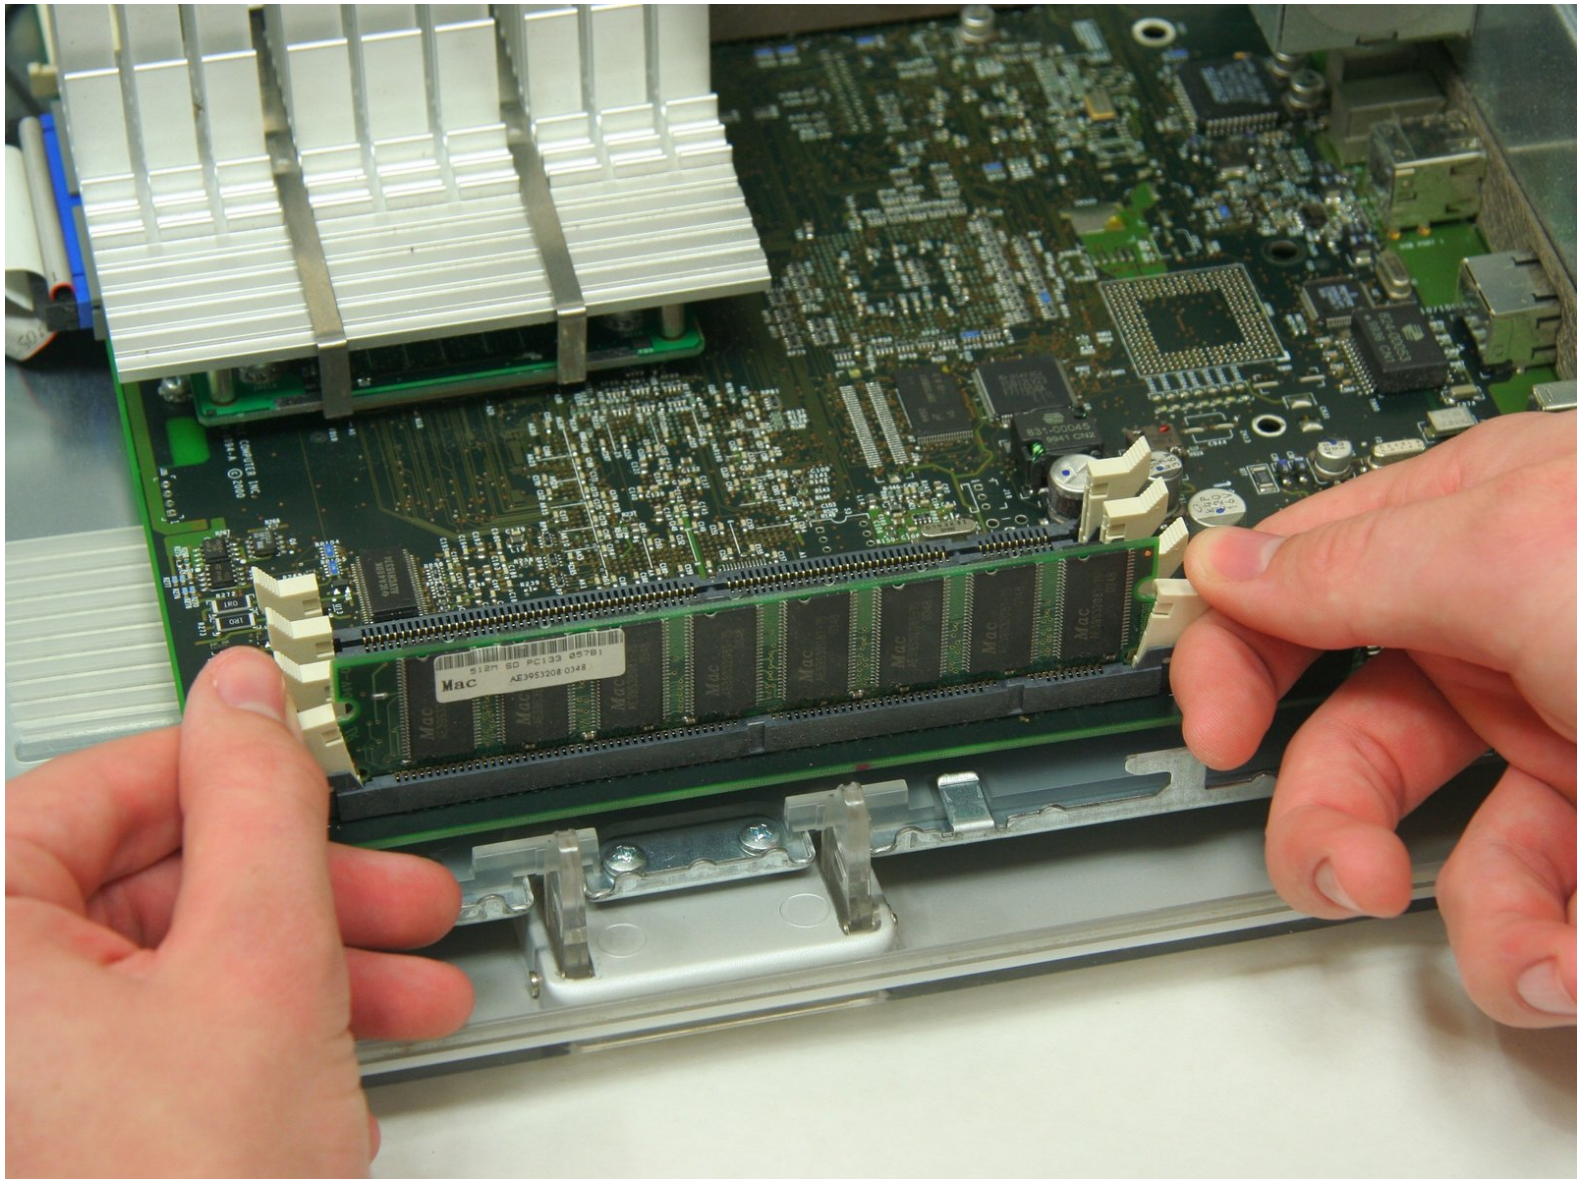

INTRODUCTION

This guide will show you how to remove the RAM Modules.



Step 1 — Opening PowerMac G4 M5183 Case

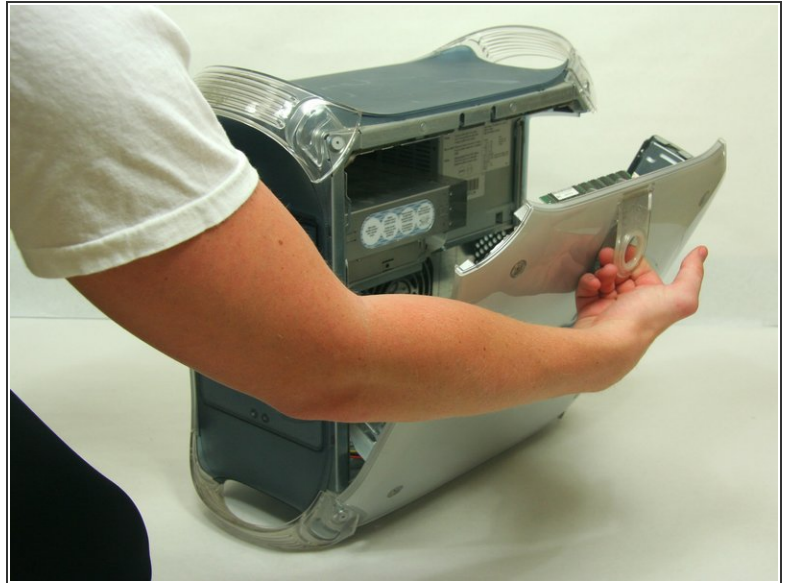

- Pull on outer latch.
- Lower door until it is level with your work surface.

⚠ Before working on the computer make sure it is not plugged into a power supply, then touch a metal object. This discharges static electricity, which could damage the computer.

Step 2 — RAM

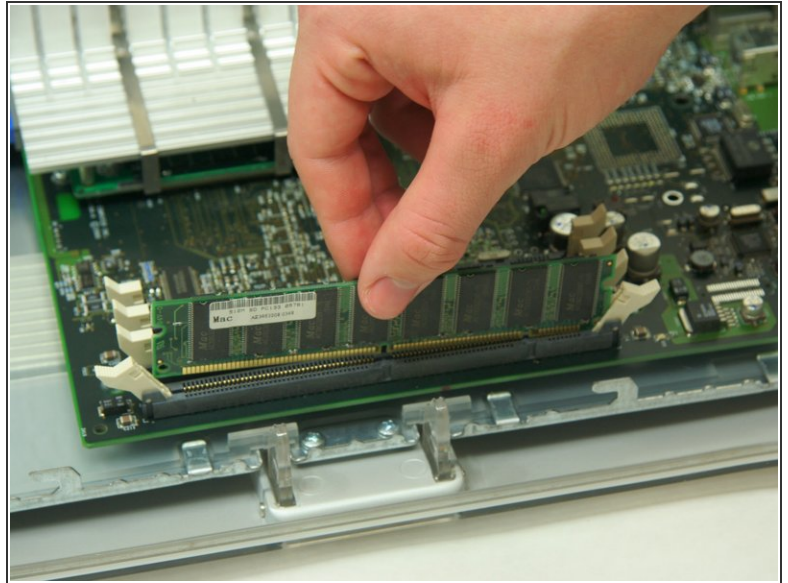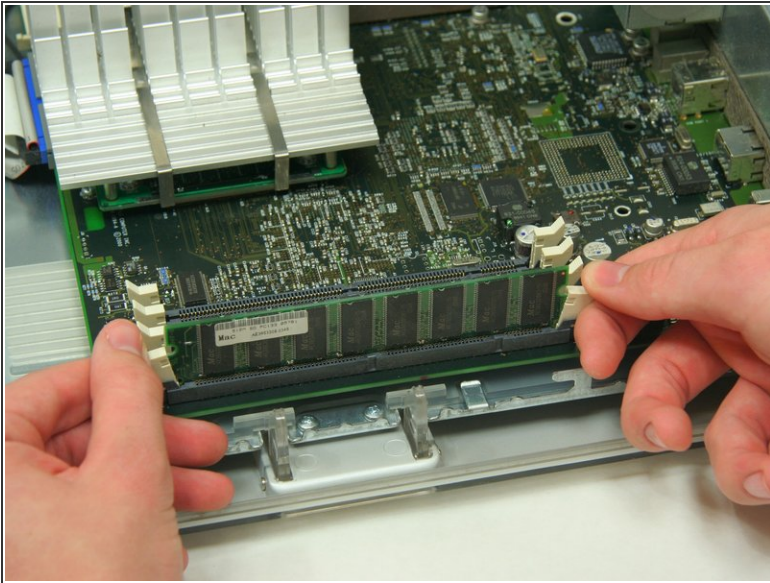

- Locate the RAM modules.
- Pull side tabs outward. The RAM will pop out of the housing.

This document was last generated on 2019-07-16 06:30:31 PM.