




Power Mac G4 M5183 Internal Battery Replacement


Written By: Justin Petrilli

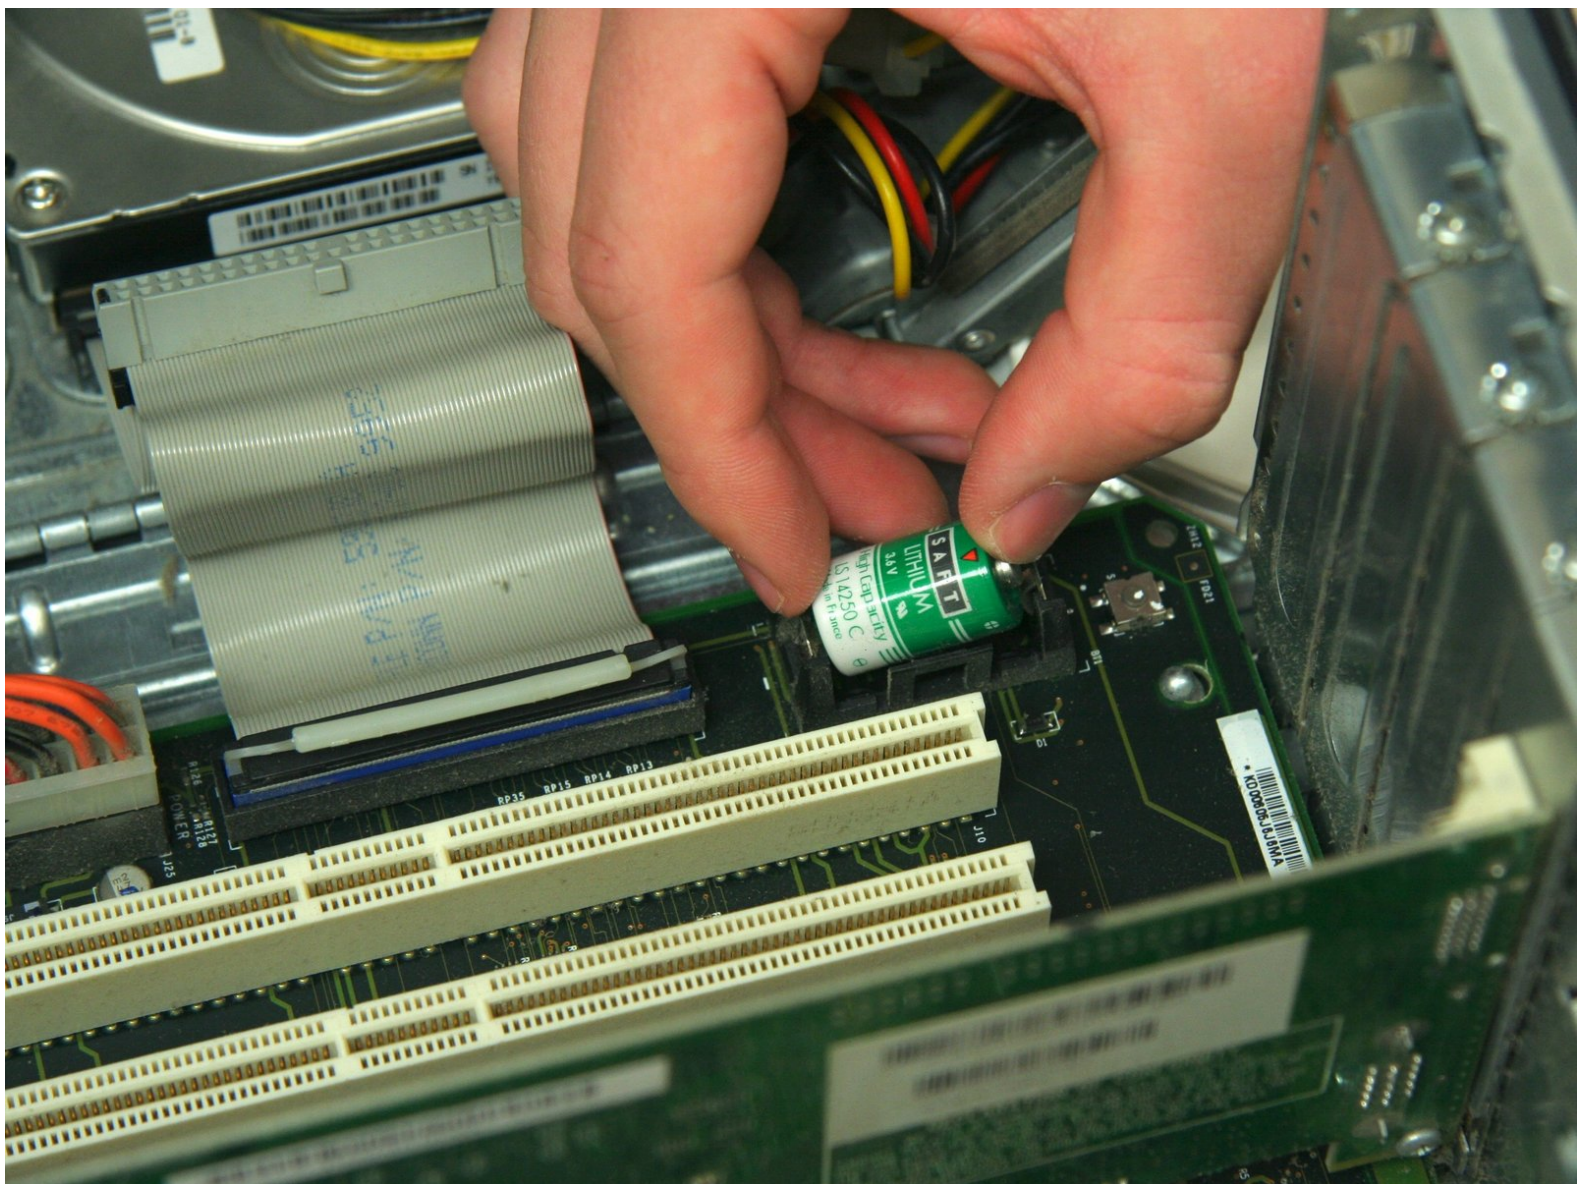

INTRODUCTION

Replacing the internal battery which regulates several functions in the computer, including the calendar.



Step 1 — Opening PowerMac G4 M5183 Case

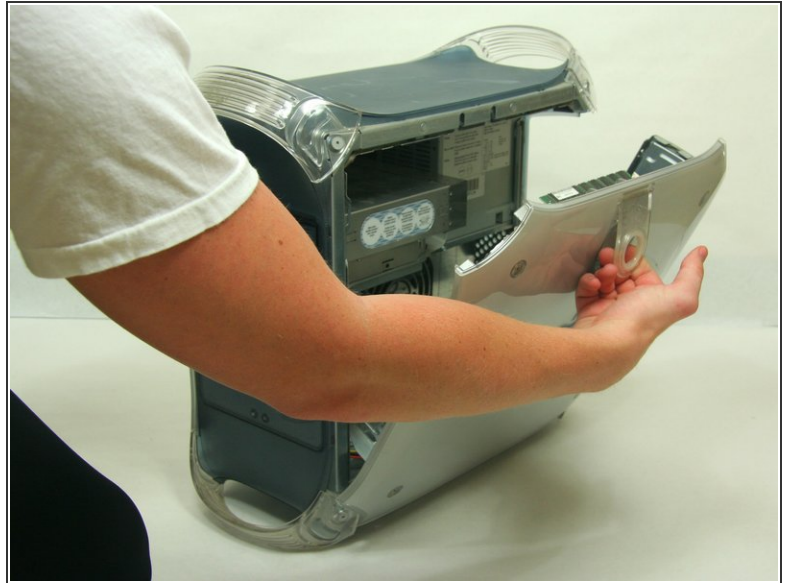

- Pull on outer latch.
- Lower door until it is level with your work surface.

⚠ Before working on the computer make sure it is not plugged into a power supply, then touch a metal object. This discharges static electricity, which could damage the computer.

Step 2 — Internal Battery

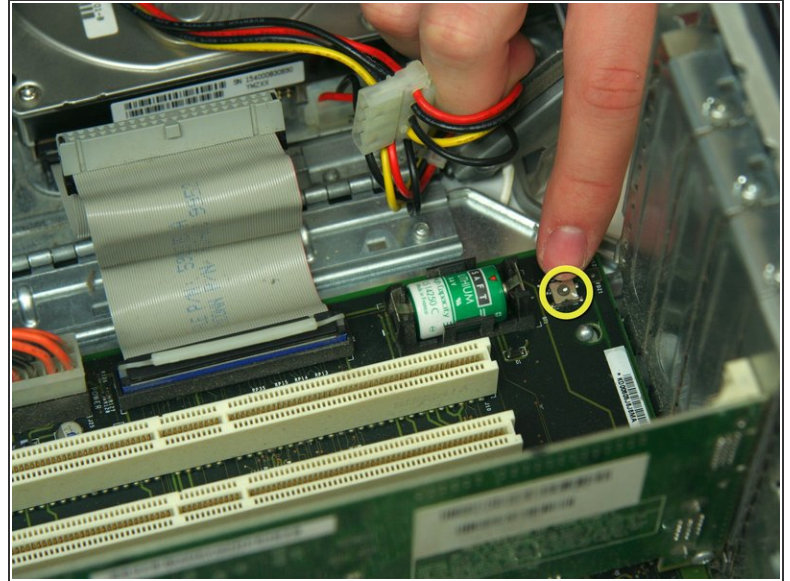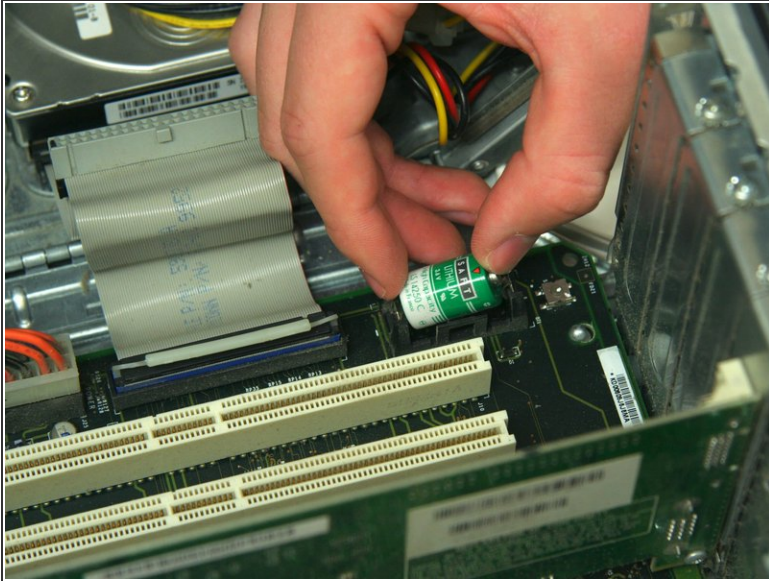

- Locate the battery.
- Remove and replace battery.
 - Push the PMU button once, and only once, to reset the power supply.

This document was last generated on 2019-07-15 11:26:22 AM.