



Removing PowerMac G4 M5183 DVD-ROM Drive Tray

Written By: Justin Petrilli




INTRODUCTION

Removing and replacing the DVD-ROM drive.


TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Opening PowerMac G4 M5183 Case

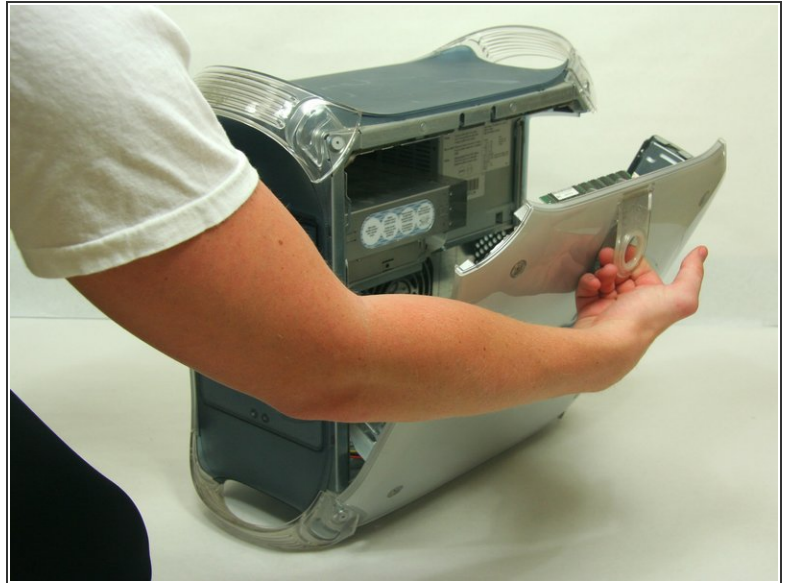

- Pull on outer latch.
- Lower door until it is level with your work surface.

 Before working on the computer make sure it is not plugged into a power supply, then touch a metal object. This discharges static electricity, which could damage the computer.

Step 2 — DVD-ROM Drive



- Removing the faceplate.
 - On the inside of the case, find the two plastic tabs.
 - While depressing the tabs, remove the faceplate by pulling and rotating outward.

Step 3



- Remove the two screws on the front of the drive with the Phillips #1 screwdriver.

Step 4



- Pull the drive out to allow access to the power and ribbon cables. Do not fully remove.
- Remove both the power and ribbon cable.

This document was last generated on 2019-08-07 01:44:22 AM.