



# Samsung Series 5 3G Chromebook 16 GB SanDisk Replacement

This guide will show you how to replace your Chromebook's SSD.

Written By: Helder Avelino



## INTRODUCTION


The 16 SanDisk is a limited internal memory capability for the Chromebook.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Back Cover

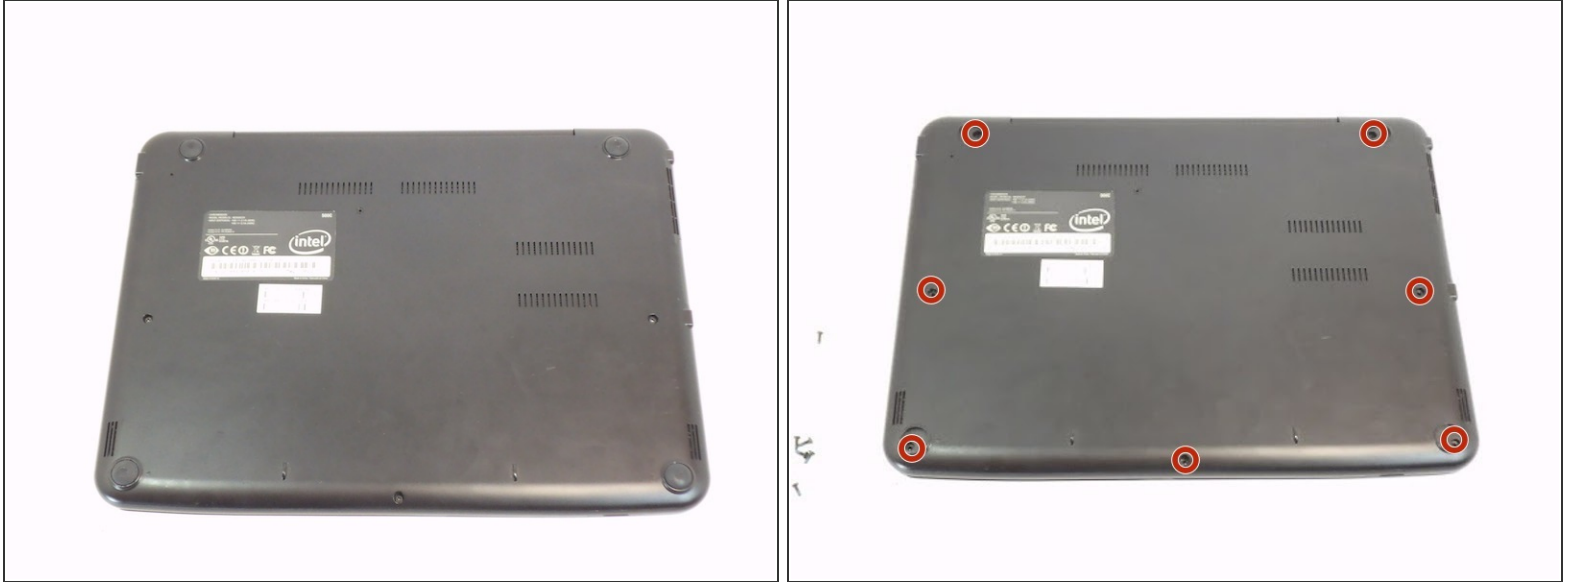


- Make sure your Chromebook is powered off before you begin.
- Place the laptop on a flat surface with the bottom side facing up.
- Remove the rubber feet from the bottom of the panel. The easiest way to do this is to use your fingernails to pick them out.
- Remove all the seven screws in the bottom panel.

## Step 2




- Loosen the back cover panel by using the flathead screwdriver or the spudger.

## Step 3

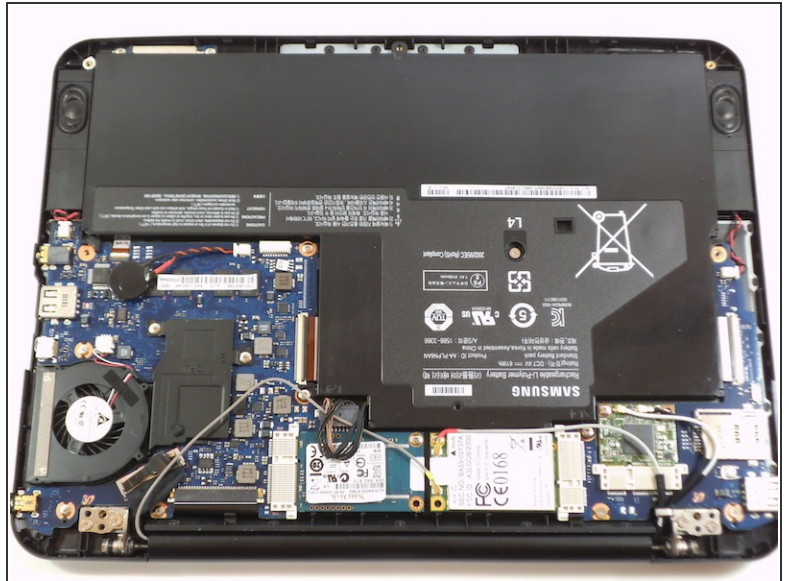

- Once you work your way around, you can remove the panel.

## Step 4 — 16 GB SanDisk

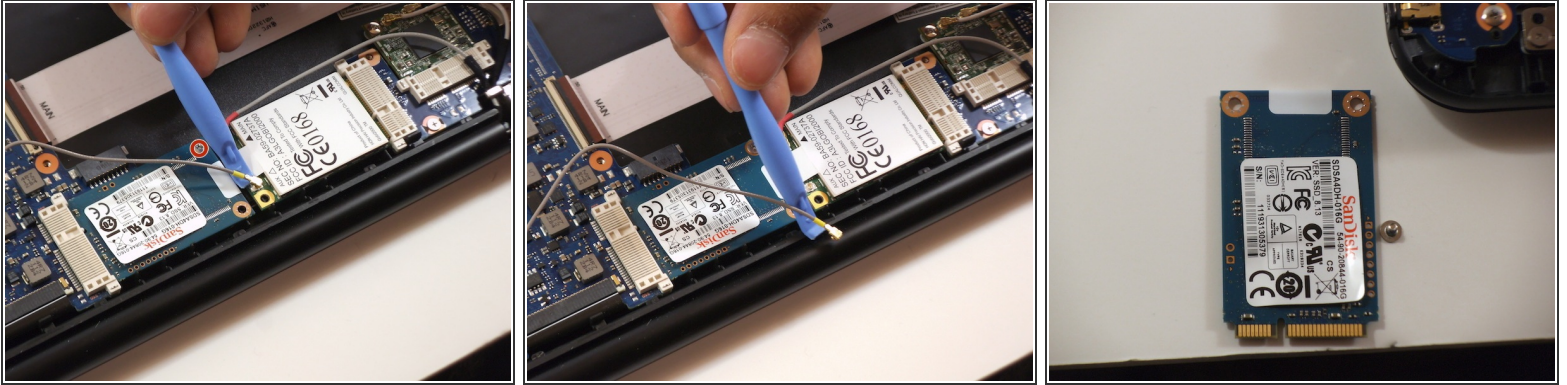

- Remove the single screw.
- use the plastic tool to disconnect the WWAN antennas from the board.
- After removing its mounting screw, the 16 GB SanDisk can be removed from the motherboard.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-23 03:07:12 AM.