



Canon Powershot A70 Shutter/Speaker Panel Replacement

Written By: Shalan Ertis



INTRODUCTION

This guide will explain the simple process to remove the panel on top of the camera, and to gain access to the speaker.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Shutter/Speaker Panel



- Open the battery compartment and remove the batteries.
- Remove the two screws that are deep in the battery compartment with a Phillips #00 screwdriver.

Step 2



- Open the CF compartment and remove the top screw with a Phillips #00 screwdriver.
- The panel that holds the shutter button and zoom will come off.
- ⚠ Be careful! There are two small wires connecting the speaker to the body of the camera. These are very delicate so proceed with caution. Do not remove.

To reassemble your device, follow these instructions in reverse order.