



PlayStation Upper Case Replacement

This will guide you in replacing of your PlayStation One's Upper Case.

Written By: trickster



 **TOOLS:**

 
- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Upper Case



- Remove all cables plugged into the PlayStation.

Step 2

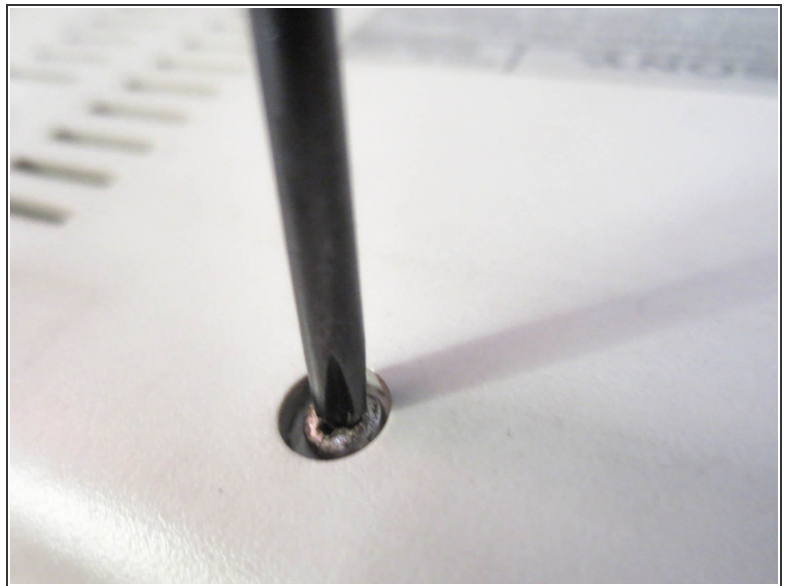


- Flip over the PlayStation and remove the six screws from the bottom.

Step 3



- Flip the PlayStation back.
- ⚠ There are no screws holding EVERYTHING inside the PlayStation so better hold it like a burger while flipping.

 Step 4

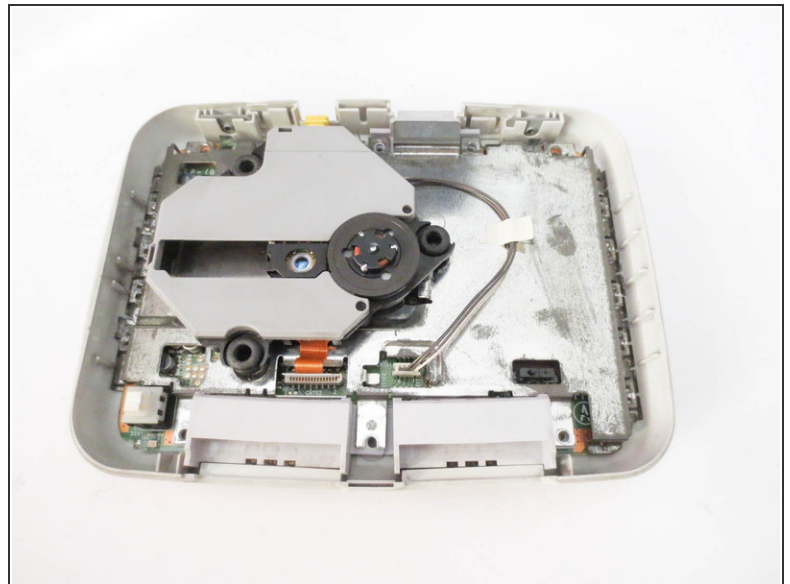

- Lift up and remove the upper case.

To reassemble your device, follow these instructions in reverse order.

