



# Nikon D70 Battery Replacement

Written By: Andrew Bookholt



---

## INTRODUCTION

Use this guide to replace your battery.

## Step 1 — Battery



- Use your finger tip to pull the battery release tab toward the center of the D70.
- Open the battery door and rotate it away from the bottom cover.

## Step 2



- Pull the battery out of the D70.
- ⓘ It may be necessary to wiggle the battery while pulling to free it from its pocket in the case.

To reassemble your device, follow these instructions in reverse order.