



Nikon D70 Bottom Cover Replacement

Written By: Andrew Bookholt



INTRODUCTION

Remove the bottom cover to access most components inside the D70.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery



- Use your finger tip to pull the battery release tab toward the center of the D70.
- Open the battery door and rotate it away from the bottom cover.

Step 2



- Pull the battery out of the D70.
- ⓘ It may be necessary to wiggle the battery while pulling to free it from its pocket in the case.

Step 3 — Bottom Cover



- Remove the following eight screws securing the bottom cover to the D70:
 - Six 5.8 mm Phillips screws
 - One 10.7 mm Phillips screws
 - One 8.2 mm Phillips screws

Step 4



- Carefully pull the bottom cover to separate it from the body of the D70.
- Remove the bottom cover from the D70.

To reassemble your device, follow these instructions in reverse order.