



Nikon D70 Memory Door Replacement

Written By: Andrew Bookholt



INTRODUCTION

Use this guide to replace a broken memory door.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Memory Door



- Open the memory door by pushing the memory door retainer away from the LCD.

Step 2



- Remove the two 2.8 mm Phillips screws securing the memory door to the rear case.
- Remove the memory door from the D70.

To reassemble your device, follow these instructions in reverse order.

