



Samsung SCH-U340 Lower Casing Replacement

Written By: Anish Sambamurthy



INTRODUCTION

This guide will cover the removal out the Samsung SCH U340s outer casing.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery



- Turn the cell phone so that the back side is facing you. Press the upper indent and slide the back cover down.

Step 2



- Pull battery up from indent at the bottom and slide it out.

Step 3



- Set the battery aside.

Step 4 — Lower Casing



- The lower casing is held on by four screws in the corner of the battery enclosure. Remove these screws.

Step 5



- Use a spudger to pry the back assembly off of the device.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-12 08:28:39 AM.