



iPhone 5c SIM Card Replacement

Replace the SIM card in your iPhone 5c.

Written By: Walter Galan



INTRODUCTION

Use this guide to remove or replace your GSM iPhone's SIM card and tray.



TOOLS:

- [SIM Card Eject Tool](#) (1)



PARTS:

- [iPhone 5c Sim Card Tray](#) (1)

Step 1 — SIM Card



- ⓘ Shut your phone down completely before removing the SIM card and tray.
- Insert a SIM card eject tool or a paperclip into the small hole in the SIM card tray.
- Press the SIM card eject tool inwards to eject the tray.
 - This may require a significant amount of force.

Step 2



- Remove the SIM Card tray assembly from the iPhone.
- ★ During reassembly, ensure that the SIM card is in the proper orientation relative to the tray.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-16 07:49:46 AM.