



Archos 5 and 48 Teardown

This tutorial is for the teardown of an Archos 5 or 48 Internet Tablet.

Written By: christophermeyer80



INTRODUCTION

The pictures below are from an Archos 5 or 48 device. Please note that this procedure requires you to be very careful and that it will void your warranty. Also, this document may not apply to your specific device model, so try it at your own risk.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Archos 5 and 48 Teardown




- The Front:

Step 2



- The Back: You can see three rubber pads under which you will find screws. The fourth screw is under the plastic arm. After you removed these four screws, you can easily pop the two plastic pieces on each side of the device.

Step 3

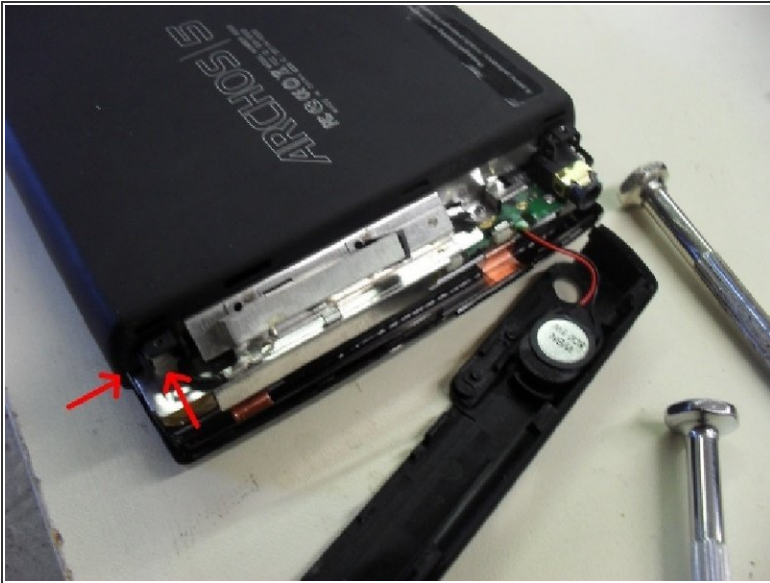


- The sides: There are two screws on each corner (so eight screws in total), indicated by the red arrows on the picture below. The metal contraption on the first picture is the wifi antenna.

Step 4




- After you remove these eight screws, you will be able to pull the screen away from the rest of the device. Tilt the small plastic strip on the connector to release the wire. Separate the screen.

Step 7

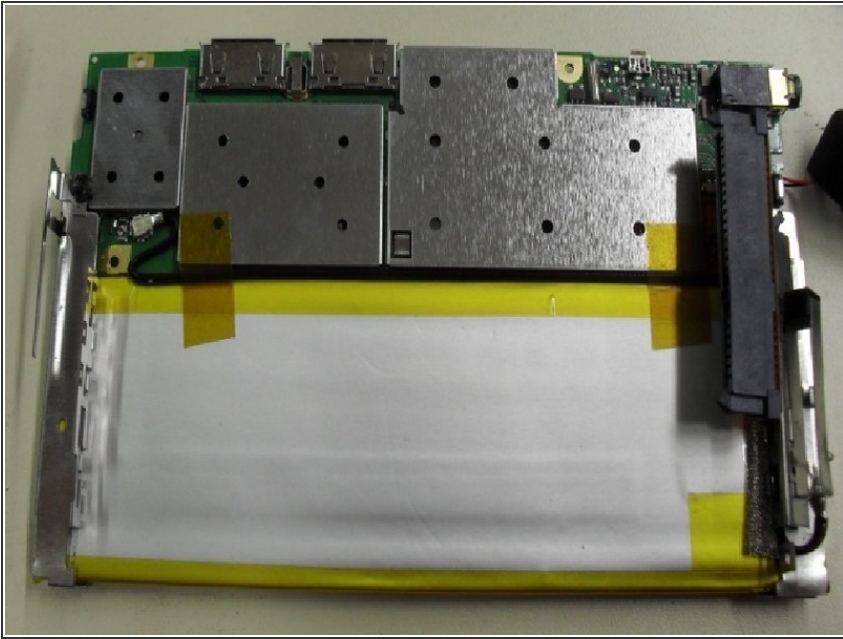

- This is the bottom of the motherboard, when the hard drive is disconnected.

Step 8

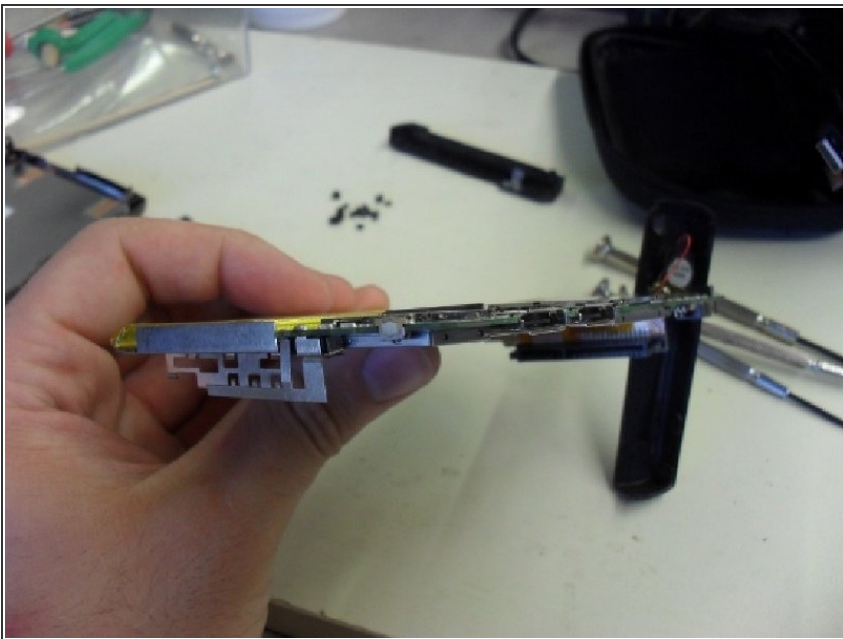

- Another picture of the motherboard, it's actually thinner than the hard drive.

To reassemble your device, follow these instructions in reverse order.