 




iRobot Roomba 4100 Edge Brush Replacement

This is a guide for either maintenance or removal of the edge brush in the Red Roomba 4100.

Written By: Samantha Barrett

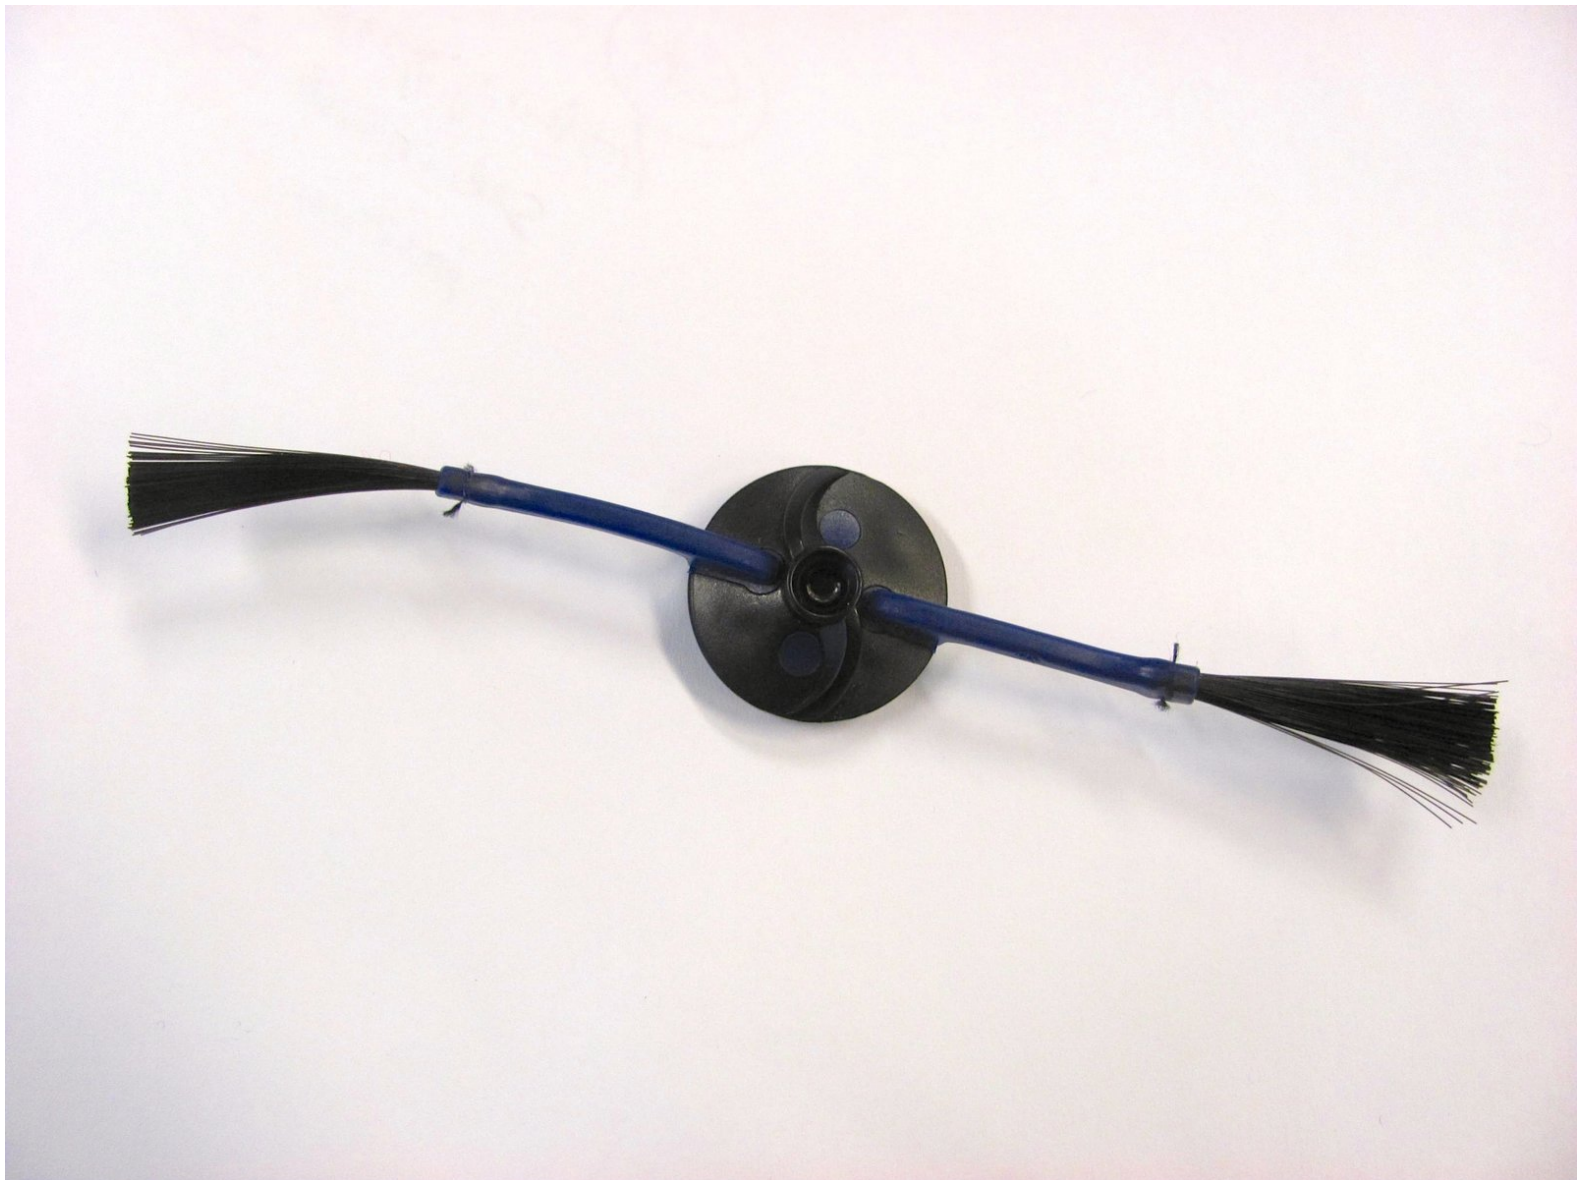

 
INTRODUCTION

This is an easy guide. It should only take a few minutes to complete. The only tool required is Phillips #1 Screwdriver.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Edge Brush

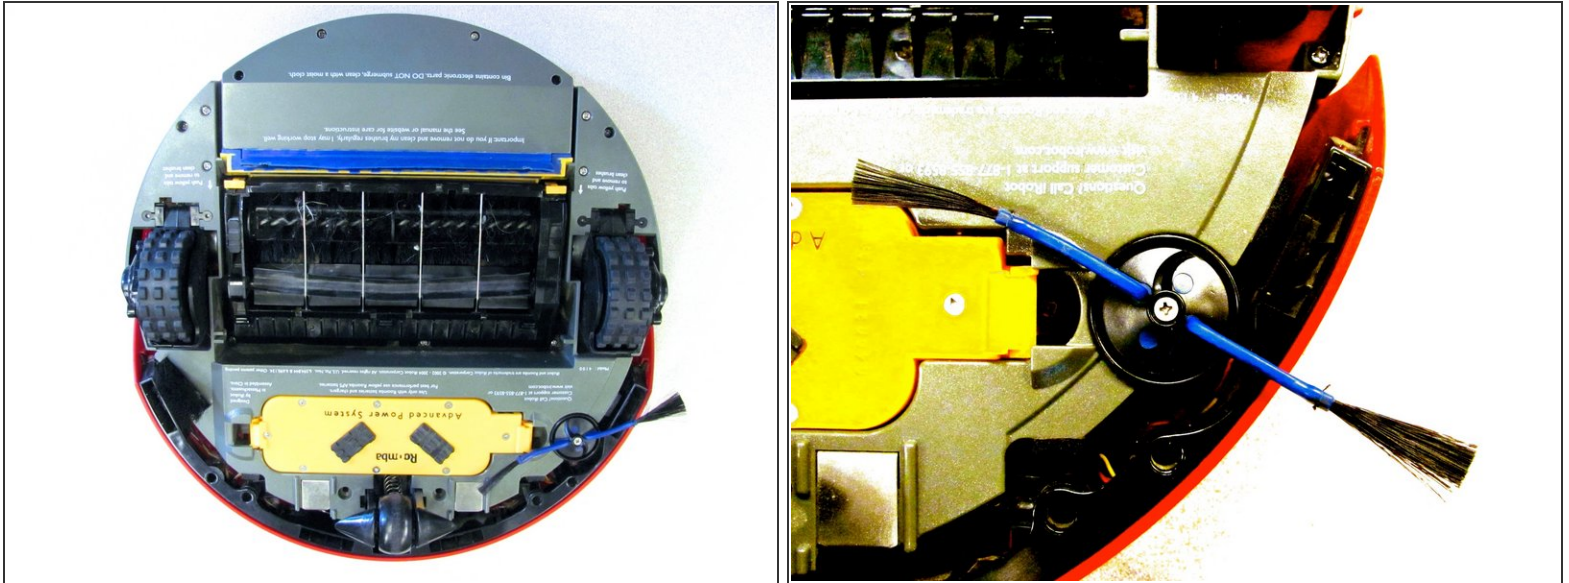

- Lay the Roomba upside down on a flat surface.
- ⓘ The edge brush is located near the battery pack.

Step 2



- Using the Phillips #1 Screwdriver, unscrew the 7.2 mm Phillips #1 screw while holding the edge brush in place.

Step 3



- Grab the edge brush and lift it up to remove.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-12 01:29:57 AM.