



# iRobot Roomba 4100 Brush Guard Replacement

This is a guide for either maintenance or removal of the brush guard in the Red Roomba 4100.


Written By: Samantha Barrett



## INTRODUCTION


Removing the brush guard will be easy. It won't take more than 5 minutes to complete and no tools are required.

## Step 1 — Brush Guard

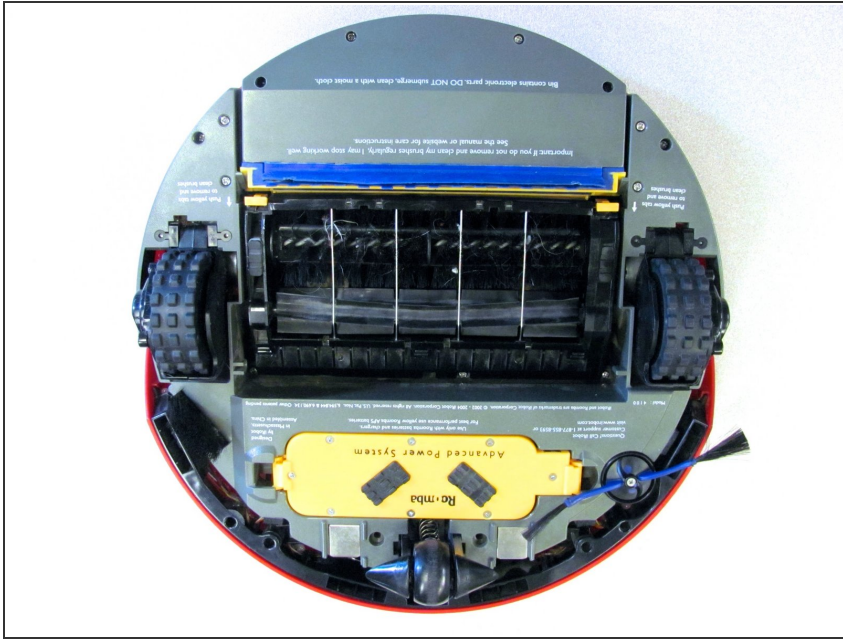


- Lay the Roomba upside down on a flat surface with the blue strip away from you.

## Step 2

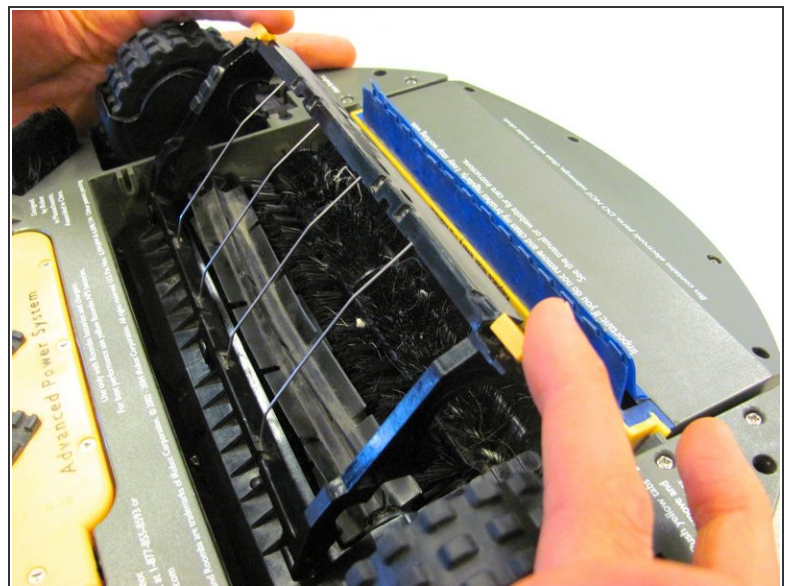

- Use your index fingers to pull the yellow tabs towards you.
- While still pulling the yellow tabs with your index fingers, tilt up the brush guard.
- ☑ For reassembly, make sure to push in the brush guard until it clicks into place.

### Step 3

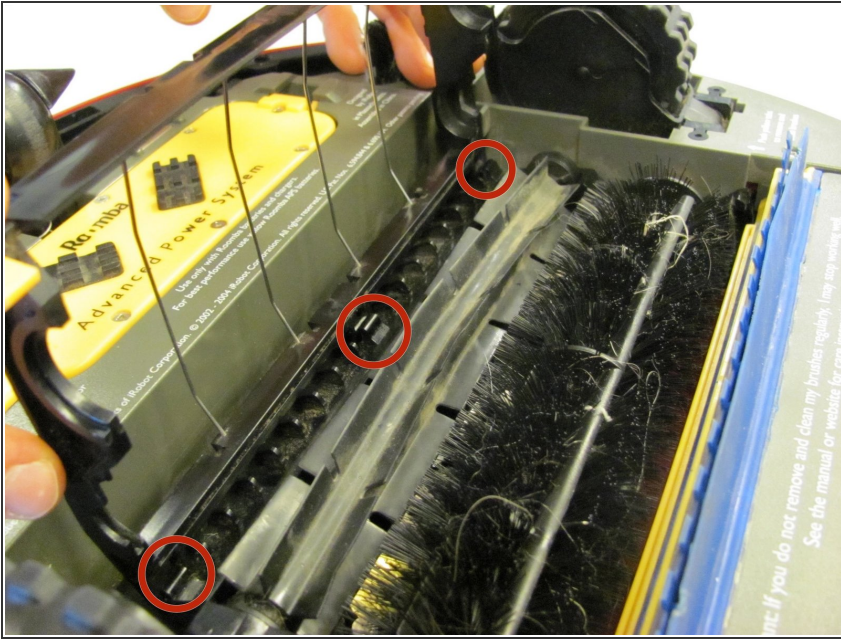

- Pull back the brush guard to unhook it from the latches.
- Remove the brush guard by lifting it up and out of the Roomba.
- ⓘ This picture has a change in orientation to illustrate the latches. Continue disassembling the Roomba with the blue strip away from you.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-22 06:51:02 PM.