



iRobot Roomba 4100 Brush Guard Replacement

This is a guide for either maintenance or removal of the brush guard in the Red Roomba 4100.


Written By: Samantha Barrett



INTRODUCTION


Removing the brush guard will be easy. It won't take more than 5 minutes to complete and no tools are required.

Step 1 — Brush Guard

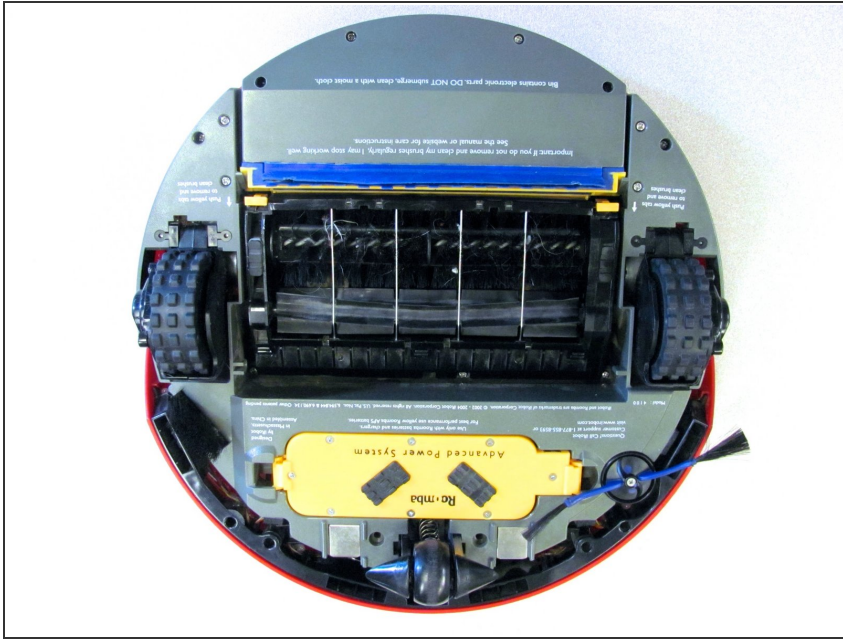


- Lay the Roomba upside down on a flat surface with the blue strip away from you.

Step 2

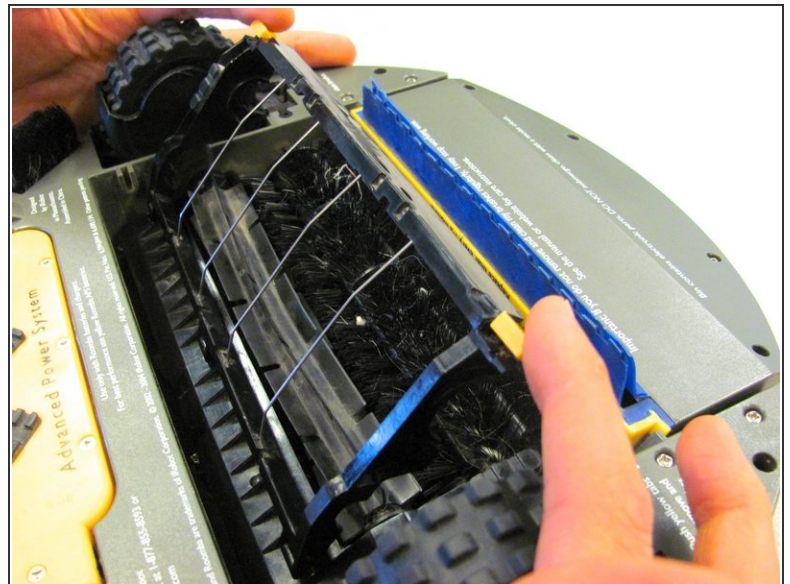

- Use your index fingers to pull the yellow tabs towards you.
- While still pulling the yellow tabs with your index fingers, tilt up the brush guard.
- ☑ For reassembly, make sure to push in the brush guard until it clicks into place.

Step 3

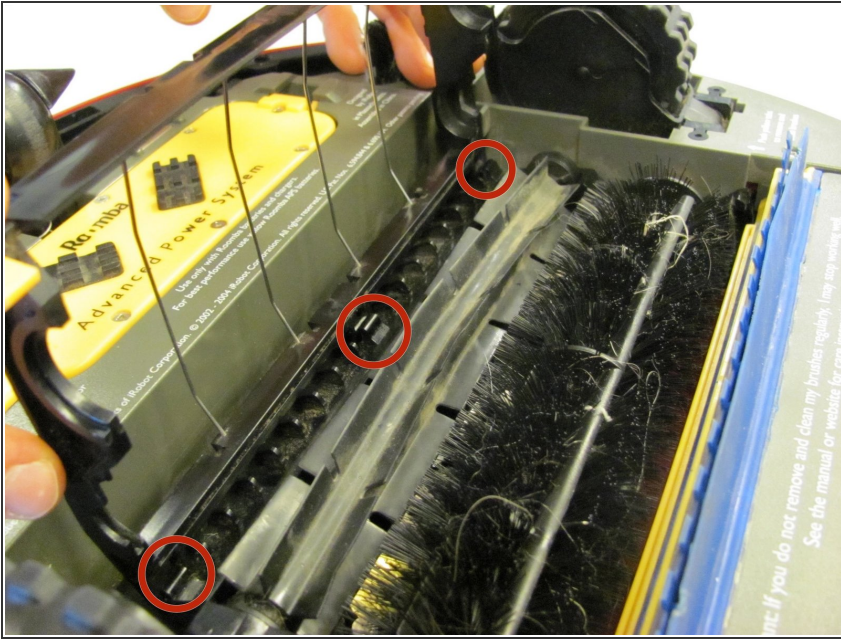

- Pull back the brush guard to unhook it from the latches.
- Remove the brush guard by lifting it up and out of the Roomba.
- ⓘ This picture has a change in orientation to illustrate the latches. Continue disassembling the Roomba with the blue strip away from you.

To reassemble your device, follow these instructions in reverse order.