



Replacing Crosley CR42 Needle

Instructions on how to replace the Crosley CR42 needle.

Written By: Roberto Rosila



INTRODUCTION


Replacing the needle is one of the quick and easy. This does not requires opening the device and can be done in a matter of minutes.



PARTS:


- [NP1 Needle](#) (1)
-

Step 1 — Needle

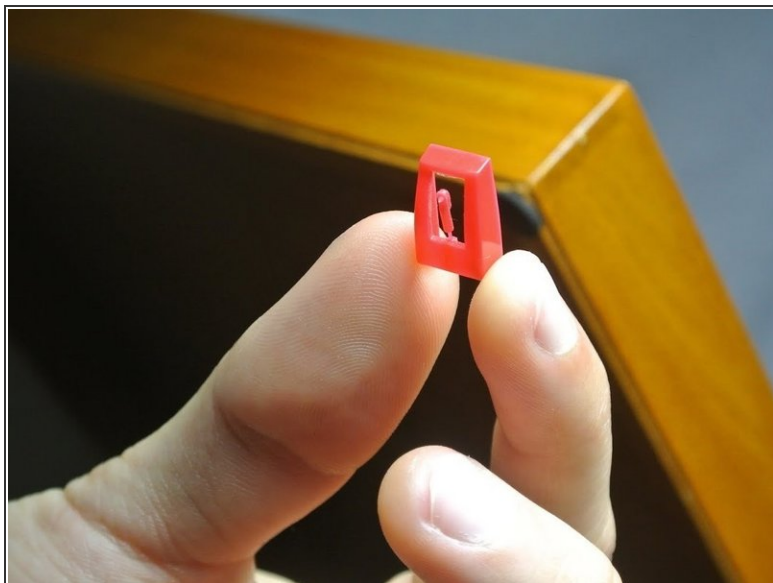


- The needle is the red plastic piece on the end of the arm. The needle snugly fits over the lower portion of the head, or front end, of the arm.

Step 2

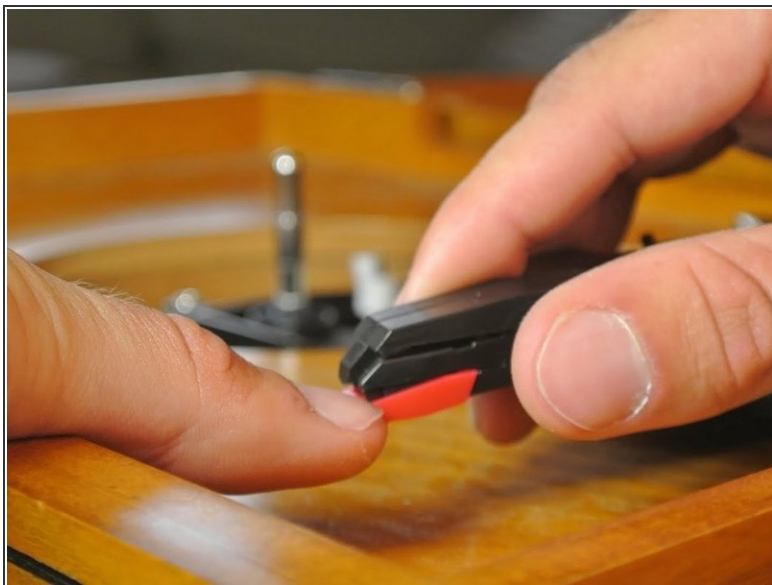

- While securing the end of the arm by holding the head in place, use your fingernail to push down on the front edge of the needle.
- ⓘ The needle should hang, as shown.

Step 3

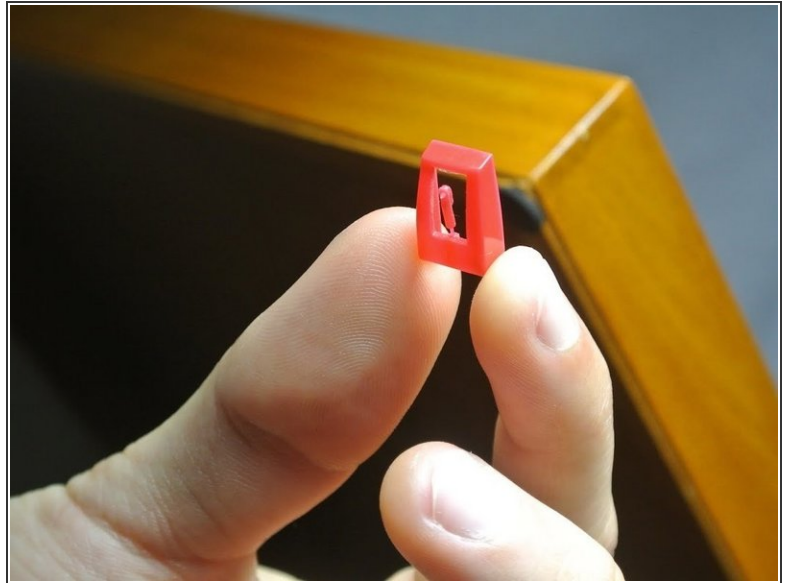

- Once the needle snaps free of the head of the arm, remove the needle by pulling down. Take care to only pull on the red portion.
- ⓘ **WHEN ATTACHING NEW NEEDLE:** Slide the back (open U shaped side) of the needle on first, then press to snap the front into place. You should hear a click.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-09 02:31:52 AM.