



Disassembling DualShock 4 Controller

Written By: Mark




 **TOOLS:**

- [iFixit Opening Tools](#) (2)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Controller



- Using the Phillips #00 Screwdriver, remove the four 6.0 mm screws securing the rear cover to the controller.

 Do not forcefully loosen the screws, as it will amount to permanent damage of the threads, making removal impossible.

Step 2



- Beginning with the **left handle**:
 - Pinch the left handle of the controller to introduce an opening.
 - Wedge a plastic opening tool into the opening and slide it up towards the joystick.
 - Pull down on the plier to crack open the casing.
- Repeat these steps for the **right handle**.

Step 3



- Wedge a plastic opening tool into the case-splittings and pull down to crack open the casing near the following buttons:
 - **Share** button
 - **Options** button
- Split the plastic covers of the controller apart, taking note that they will still be attached by circuit board ribbons.
- ⓘ Three small pieces are often released from the framework. To prevent loss, maintain a controlled work field.
 - 2 Trigger Springs
 - 1 Grey Reset Button Extension

To reassemble your device, follow these instructions in reverse order.