



# Nikon D40 Flash Pin Replacement

Replace your flash pin to make your flash pop up like new.

Written By: Lindsey Chase



---

## INTRODUCTION

This guide will teach you how to open up your flash safely and replace the flash pin that holds the flash upright.

---

### TOOLS:


- [Small Phillips Head Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Flash Pin



- Turn off the camera and remove the battery.

## Step 2

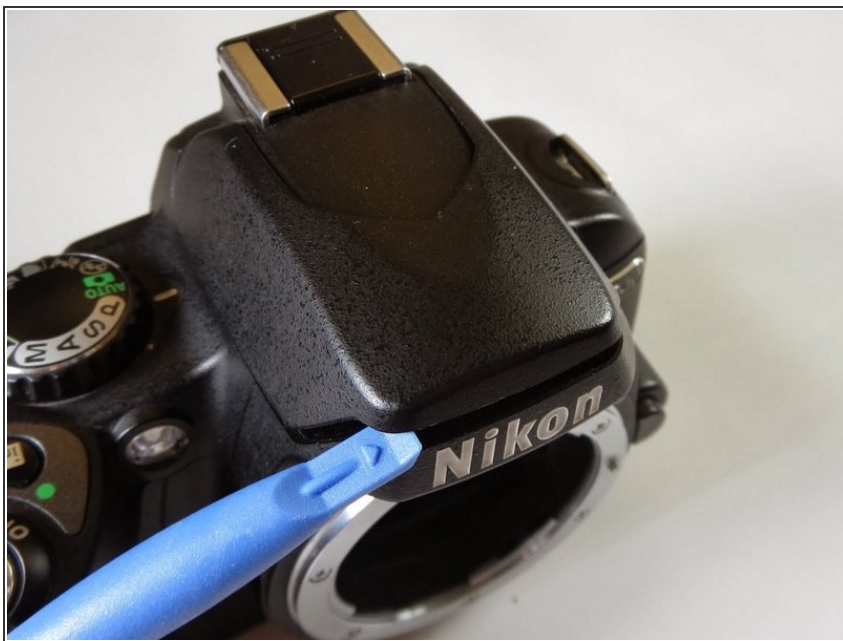

- Pry the flash open using the plastic opening tool.

### Step 3



- Remove the two Phillips #0 3.0 mm screws from the front of the flash compartment using the small Phillips Head screwdriver.

### Step 4



- Pry off the back plastic of the flash compartment using the plastic opening tool.
- When it is time to reassemble the flash module, a certain amount of force and precise alignment will be required.

## Step 5



- On the left of the camera you will see a metal spring.
- Unscrew the Phillips #0 3.0 mm screw holding the spring in place, using the small Phillips Head screwdriver.

## Step 6



- Remove metal spring and replace with new spring.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-10 10:56:35 PM.