



# HP rp5700 Cover Removal Replacement

remove the cover of the desktop. All the components of this desktop can be remove by hand except for the heat-sink and the motherboard.

Written By: Alyssa Briones



## INTRODUCTION

The computer case houses all the internal components of the computer that are essential to its operations. Certain cases may need thumb screw removal or maybe design so that they are tedious to be taken apart, however the HP rp5700 is designed to be easily disassembled.

Tip: If it doesn't come loose, wiggle it gently.

## Step 1 — Cover Removal




- Make sure the computer is unplugged.
- ⚠ Be sure to touch any metal surface with your hand to discharge any static electricity that might have built up.
- Make sure all auxiliary cords are disconnected from the desktop. If not, remove them using your hands.
- Set the desktop down horizontally with the front side facing you.

## Step 2



- Hold the desktop with two hands by grasping both sides of the desktop.
- Press the buttons on both sides using your index fingers.

## Step 3

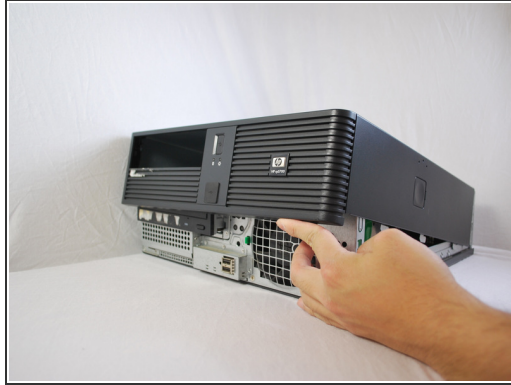

- Slide the top cover about an inch forward using your thumb to push it towards you.
- Make sure that the bottom is still secured by both hands.
- Lay the desktop back on the table and pull the case forward as far as it can go.
- Lift the cover up and off.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-11-23 05:54:58 AM.