



Disassembling Macintosh IIsx Top Case

Written By: Chris Green



INTRODUCTION

This guide will show you how to remove the top case of the Macintosh IIsx

TOOLS:



- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Top Case



- Start by turning the computer around, and remove this #0 Phillips Screw.
- ⓘ There may or may not be a Phillips #0 screw here, depending on whether or not the computer has ever been serviced.

Step 2

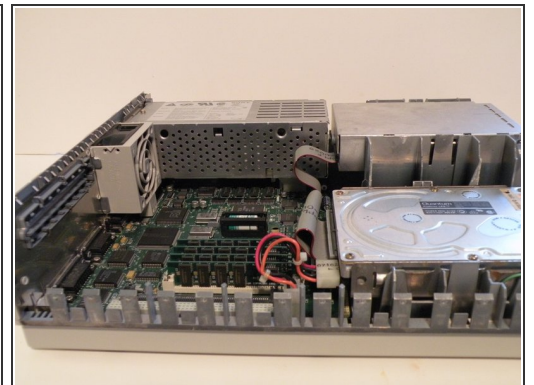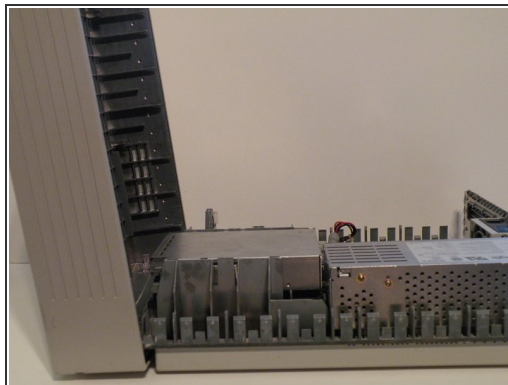

- Now lift these two clips, and slowly pivot the case up.
- You can now separate the top of the computer from the rest of the machine.

To reassemble your device, follow these instructions in reverse order.

