 




Crosley CR42 Lid Hinge Replacement

Follow this guide to replace the hinge that props open the lid of the record player.

Written By: Jason

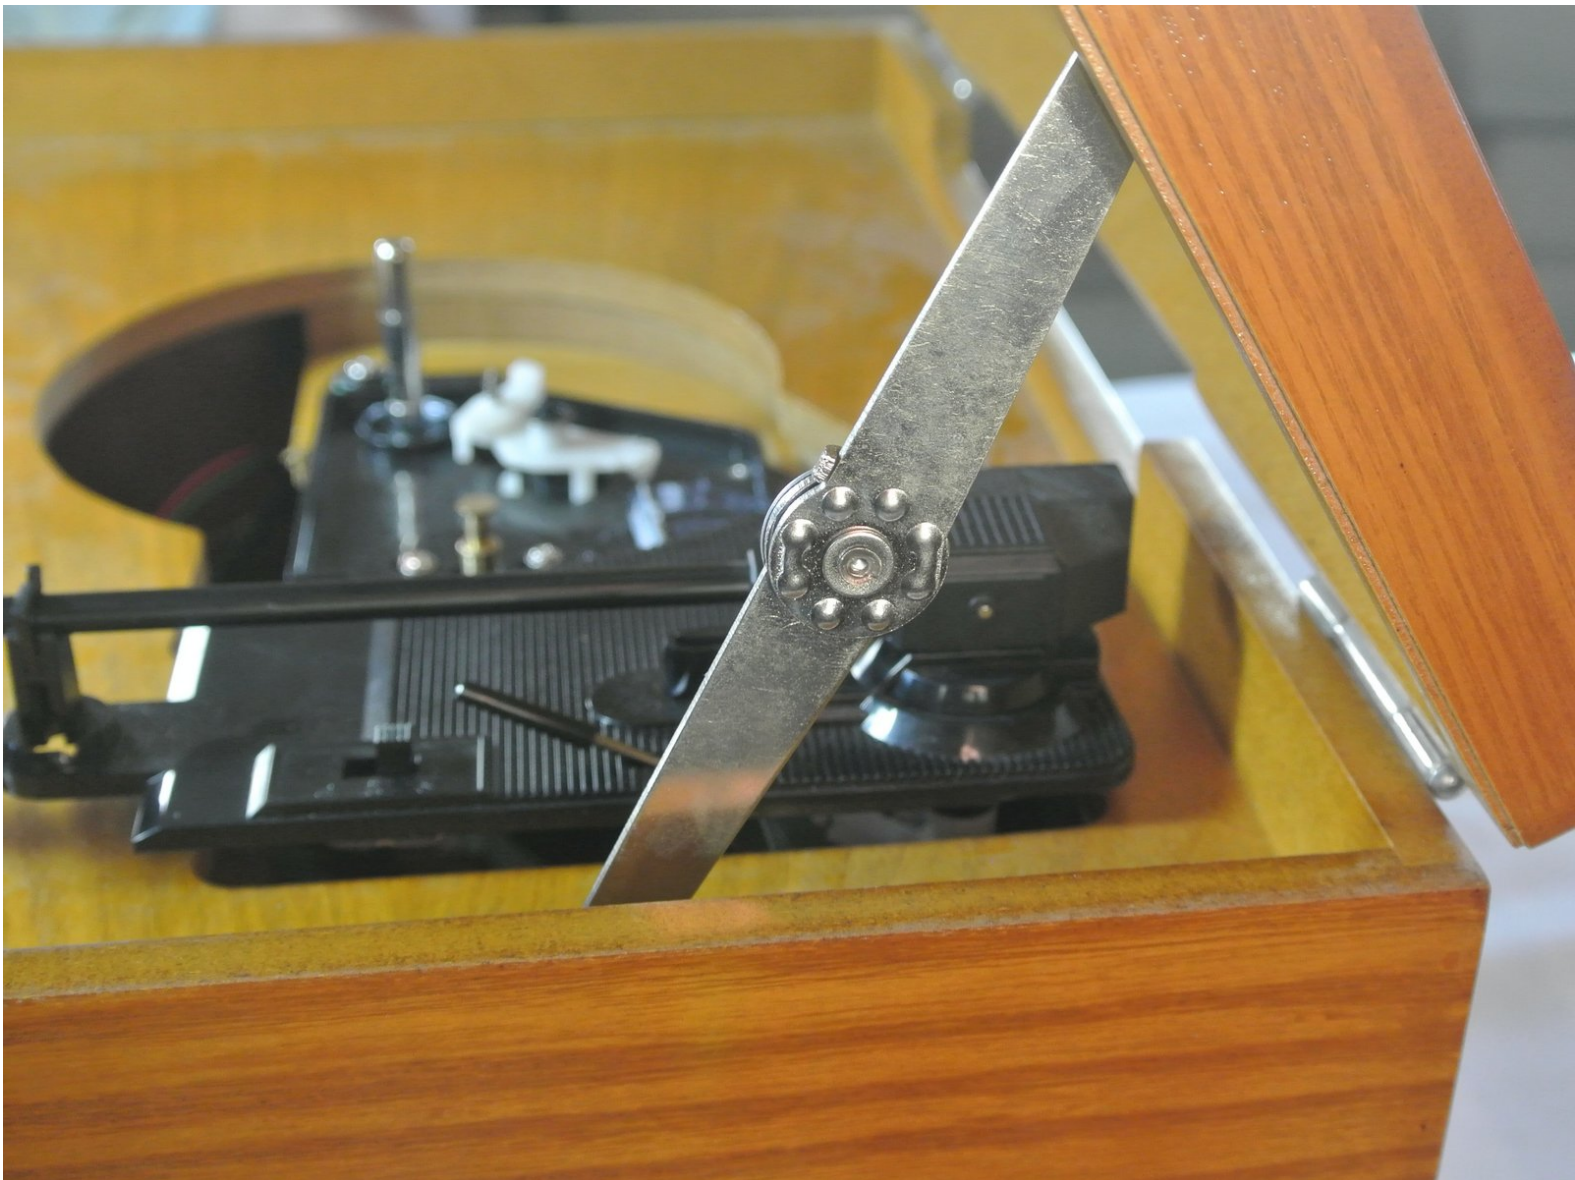

INTRODUCTION

If the metal hinge that props open the lid of the record player is damaged or broken, this will guide you through the process of removing and replacing the metal hinge.

TOOLS:

- [Phillips #2 Screwdriver](#) (1)

PARTS:

 
- [Replacement top hinge](#) (1)
-

Step 1 — Lid Hinge



- Open the lid and find the door hinge.

Step 2

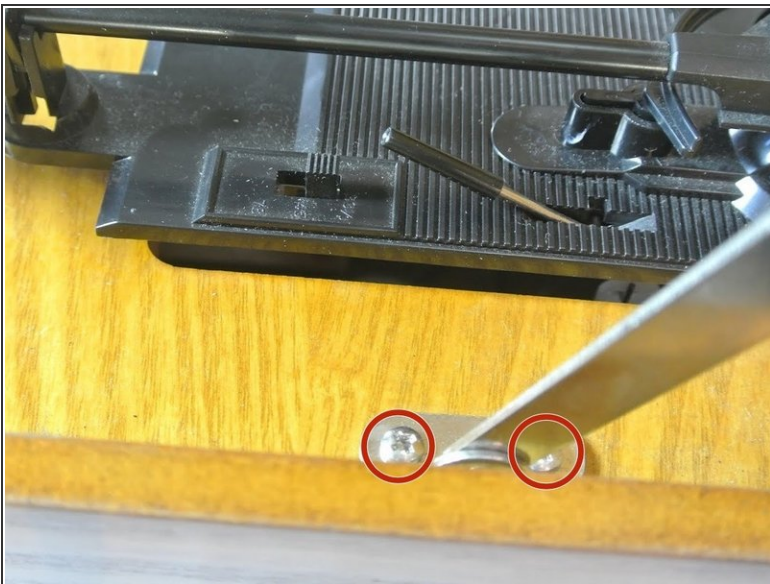

- Remove the two 12 mm screws that attach the hinge to the box.

Step 3 — Step 3

- Remove the 2 screws that attach the hinge to the top of the box.
- ☞ When reassembling, it is easier to attach the top screws first and then the bottom screws.
- ⓘ The picture displayed is from disassembly and is only used to show the location of the bottom screws. The top screws should be attached first.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-12 12:47:08 PM.