



Removing Dell Inspiron 1150 Battery

The purpose of this guide show how to remove the battery.


Written By: Teja



INTRODUCTION

If you're repairing any part of the computer, it is always important to remove the battery.

Step 1 — Removing Dell Inspiron 1150 Battery

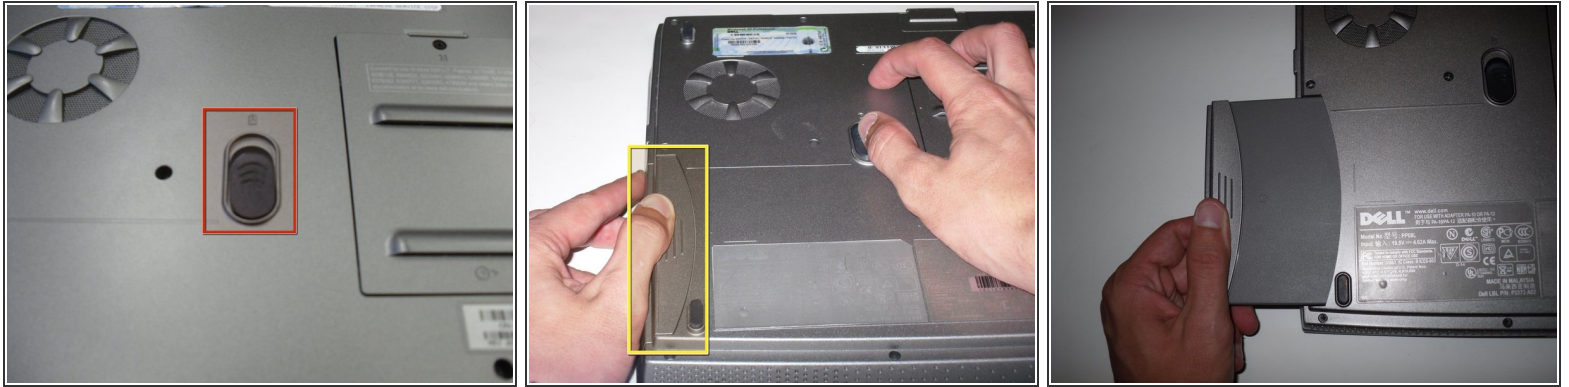

- Place the laptop upside down on a clean, flat surface.
- Locate the battery release button with the padlock symbol above it.
- Slide the battery release button towards the padlock symbol and hold it there. Note that the button is spring loaded and will return if released.
 - ⓘ The battery is now released from the battery compartment.
- Gently remove the battery from the side of the laptop.

This document was last generated on 2019-07-21 06:11:50 PM.