



Samsung YP-P3 Case Backplate Replacement

This guide covers replacing the backplate on the Samsung YP-P3 media player.

Written By: Andrew Groeneveld





TOOLS:

- [Phillips #000 Screwdriver](#) (1)



PARTS:

- [Samsung YP-P3 Case Backplate](#) (1)

Step 1 — Case Backplate




- Pry up the small black piece of plastic located between the volume [-] button and the HOLD/ON button.

Step 2



- Underneath the piece of plastic you just removed, there is a small screw (Phillips #000, 2.0 mm long). Use a Phillips #000 screwdriver to remove it.

Step 3

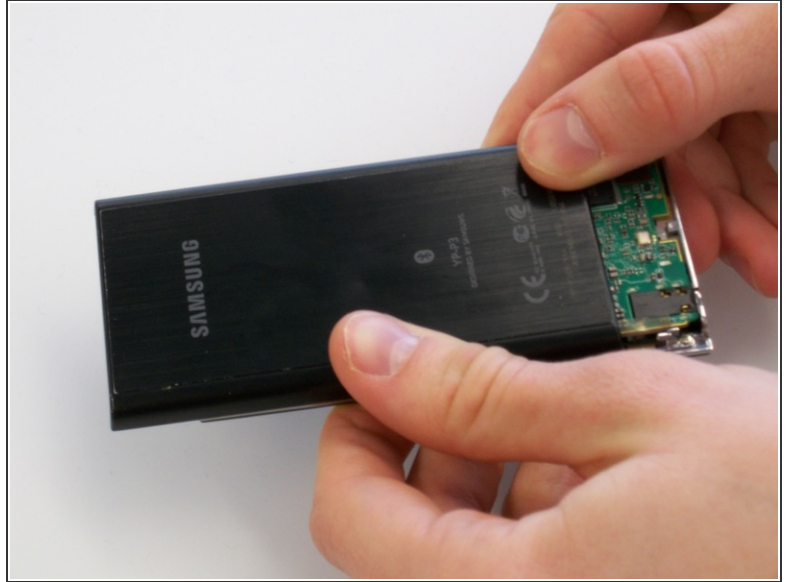

- Push on the backplate with both thumbs, sliding it towards the top of the device.
- Once it begins to move, lift up slightly. You can then slide the backplate all the way off.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 07:17:54 AM.